




1 Crown installation

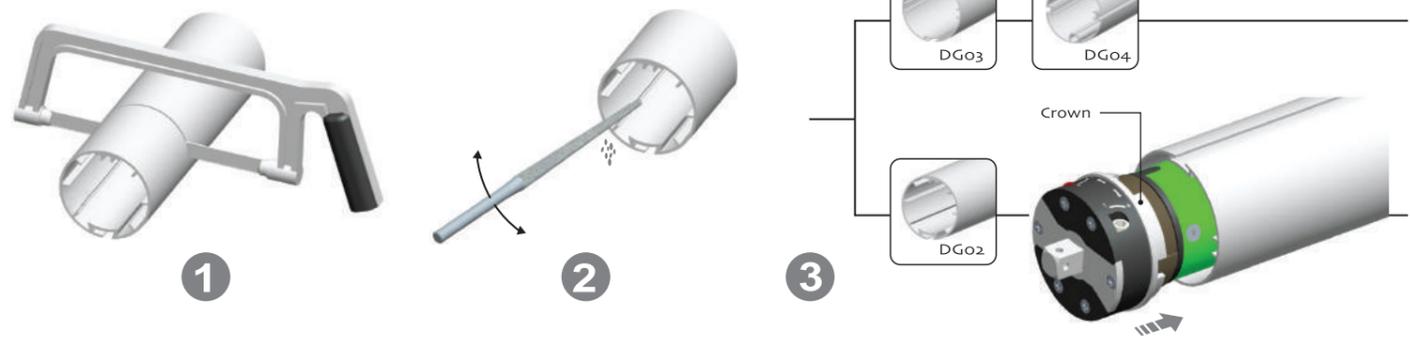


2 Drive adapter installation

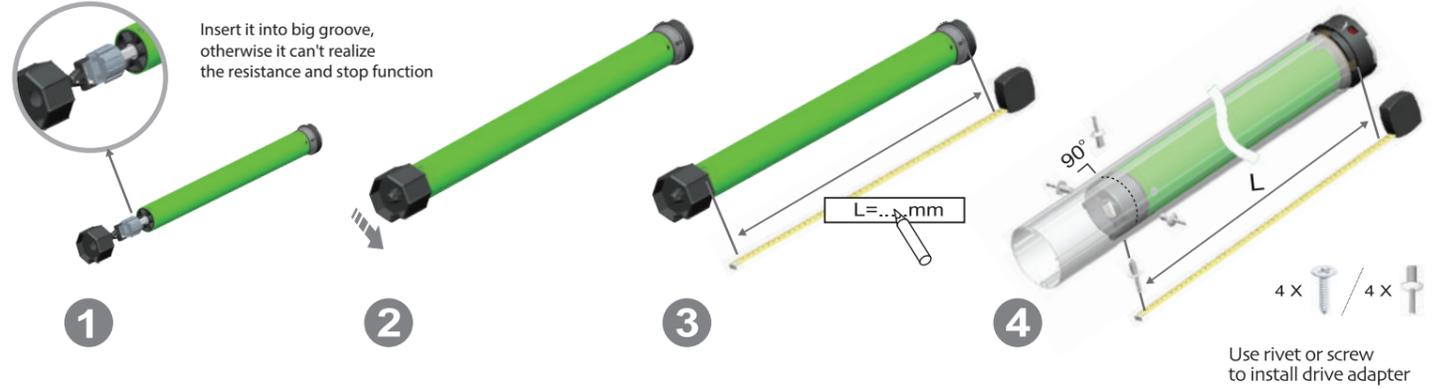



3 Bracket installation

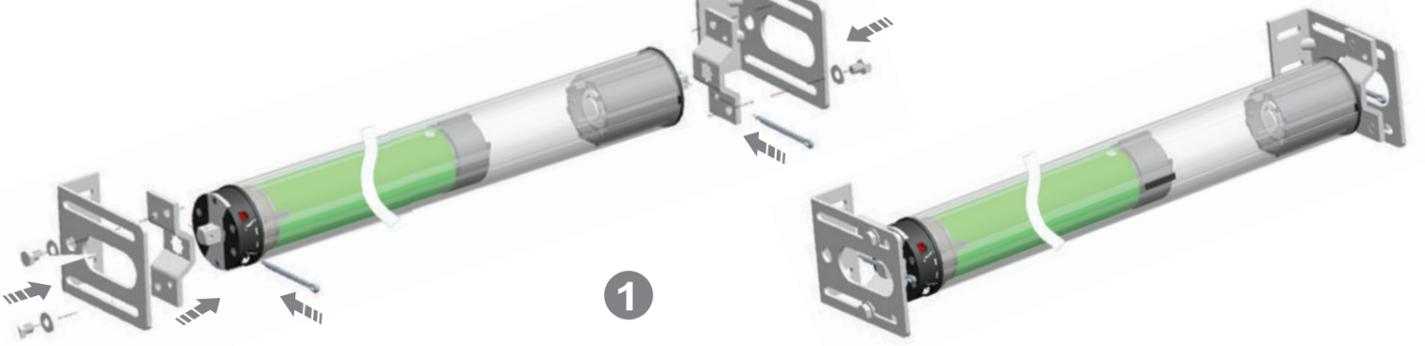


4 Circuit installation

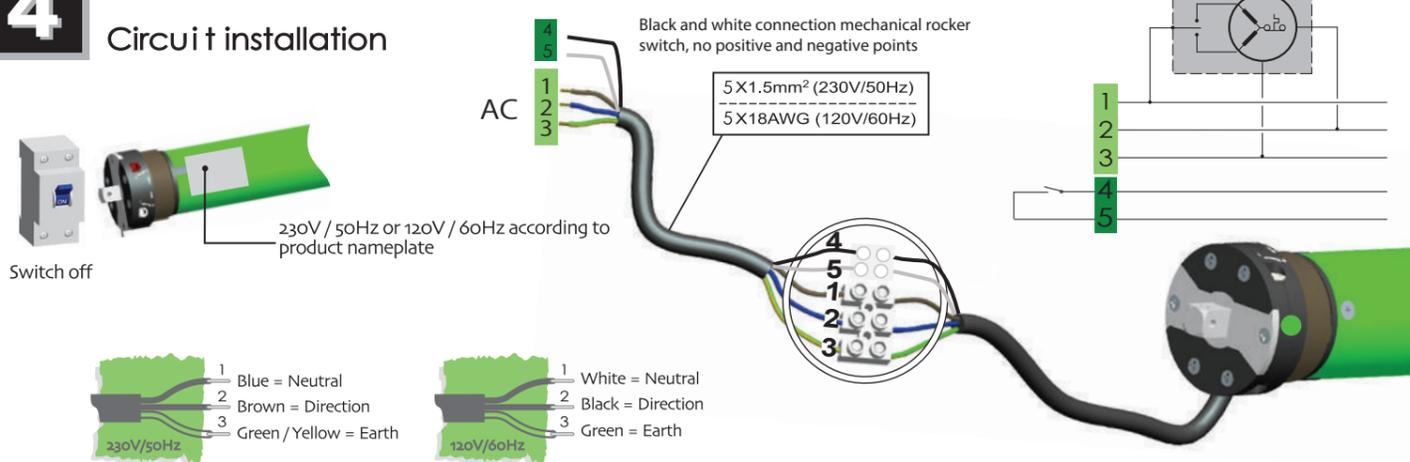


5 Setting up

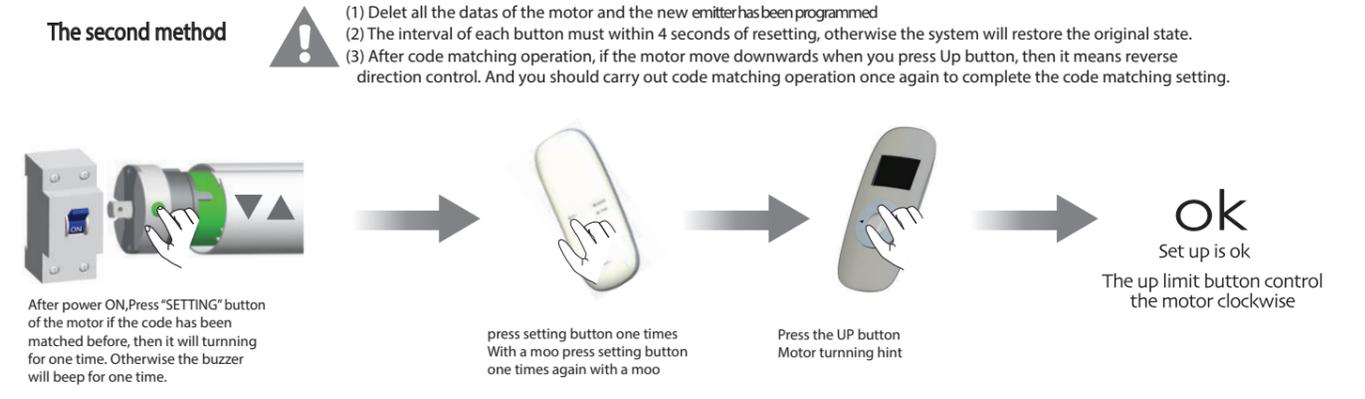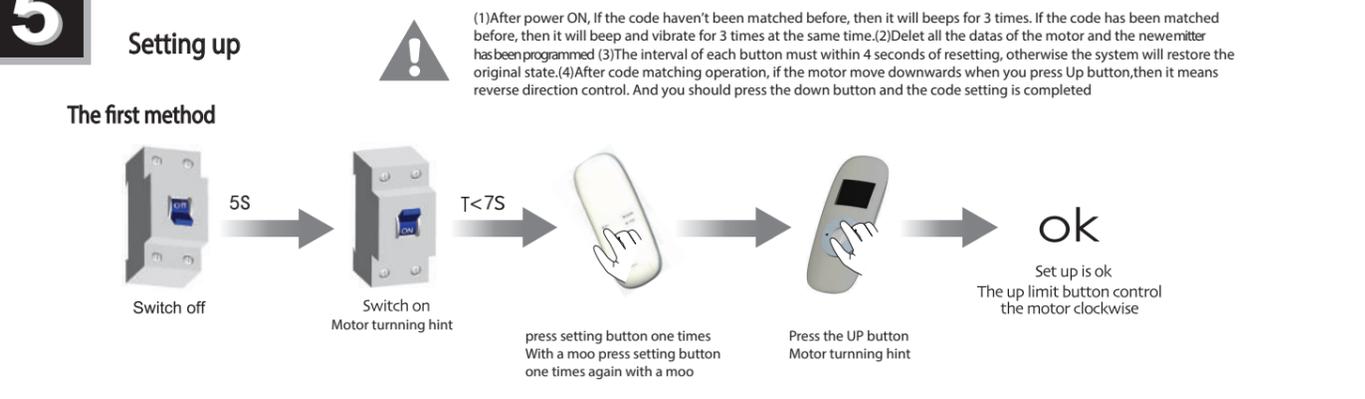


6 Initialization

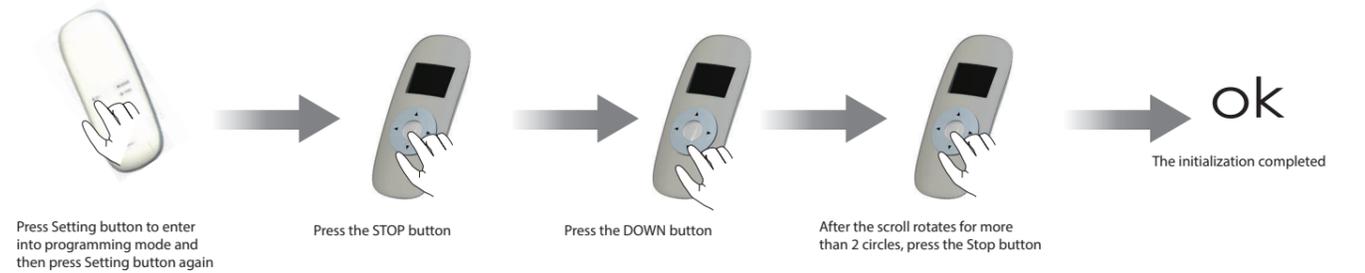


7 Light adjust function

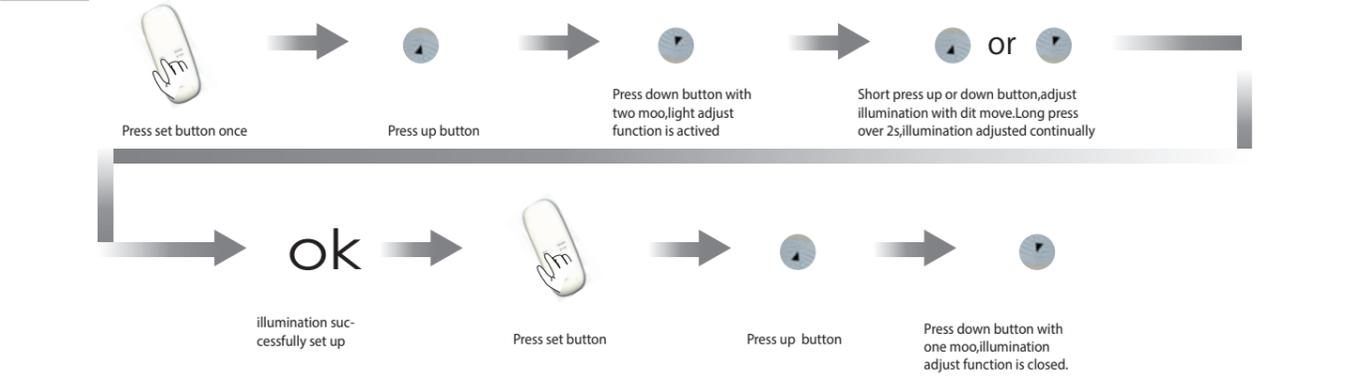


8 Set up/down limit position

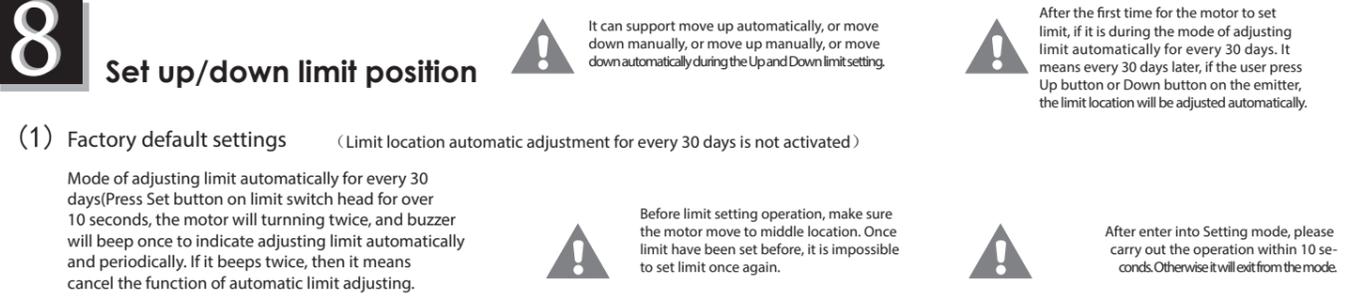

(2) Up limit location and Down limit location set automatically

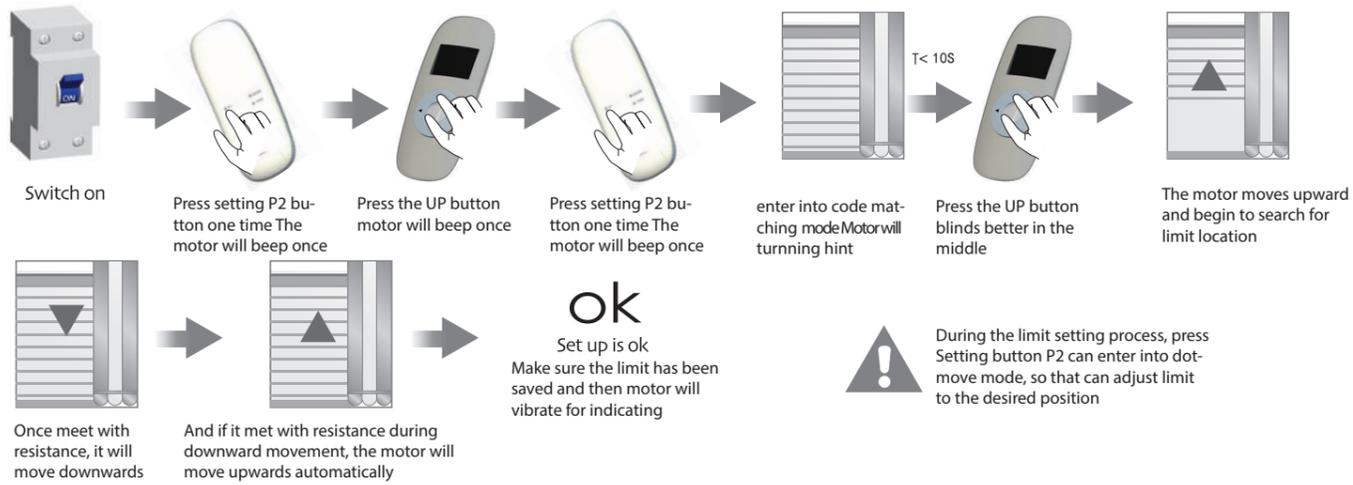

(3) Up and Down limit manual setting should be set before the motor moves upward and meets with resistance when the motor is in Up and Down limit automatic setting mode!

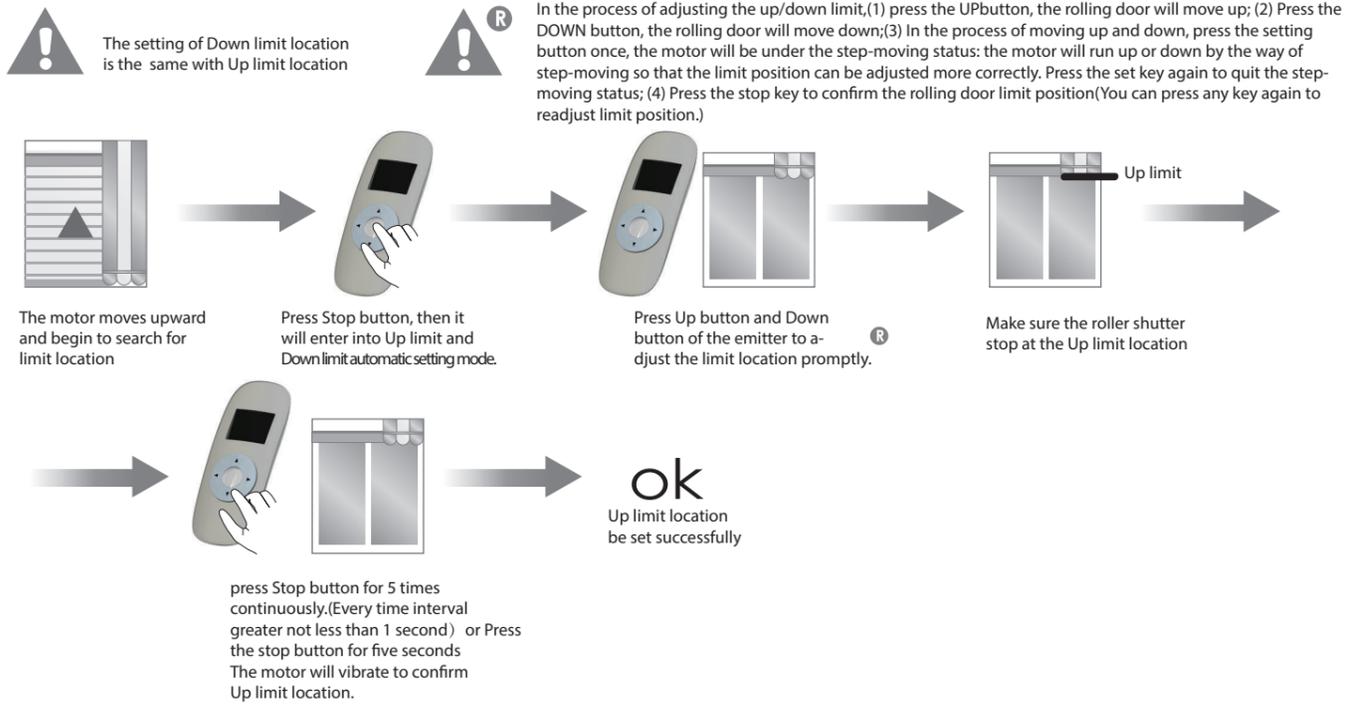

9

The third limit point setting

After the up limit and down limit setting, you can set the third limit point between them as the half open position. The third limit point will be cancelled as the cancellation of limit and code matching: After the third limit point setting, if you want to set a new third limit, please cancel the previous third limit point. Limit setting with hint of sound;

