







DC1690 Receiver Specification

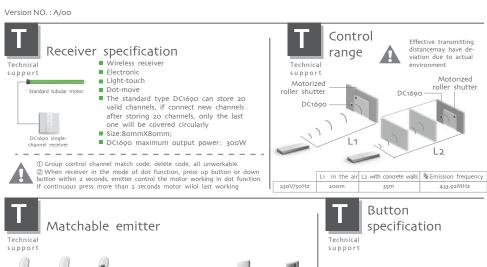

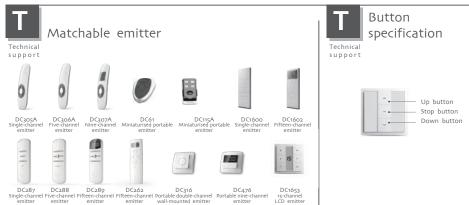

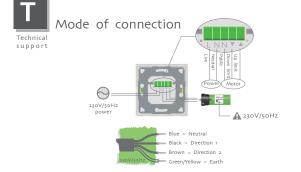

 The best installation distance



- The shortest distance between receiver and ground ≥1.5m
- 2 The shortest distance between receiver and roof ≥0.3m
- 3 The shortest distance between receiver and receiver ≥0.2m



Set up and add emitter

Additional During setting, the time between two function operation must be within 6S, or else, it will revert to the original state.






Cancel one channel of emitter

Additional During setting, the time between two function operation must be within 6S, or else, it will revert to the original state.



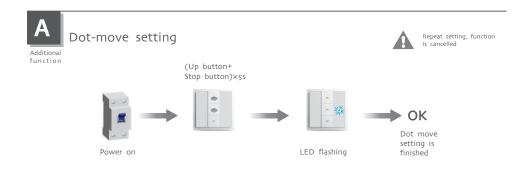



Delete all the emitter channels

Additional function

