


1 Crown installation




Forbidden drill through crown and inner gear wheel


2 Drive adapter installation

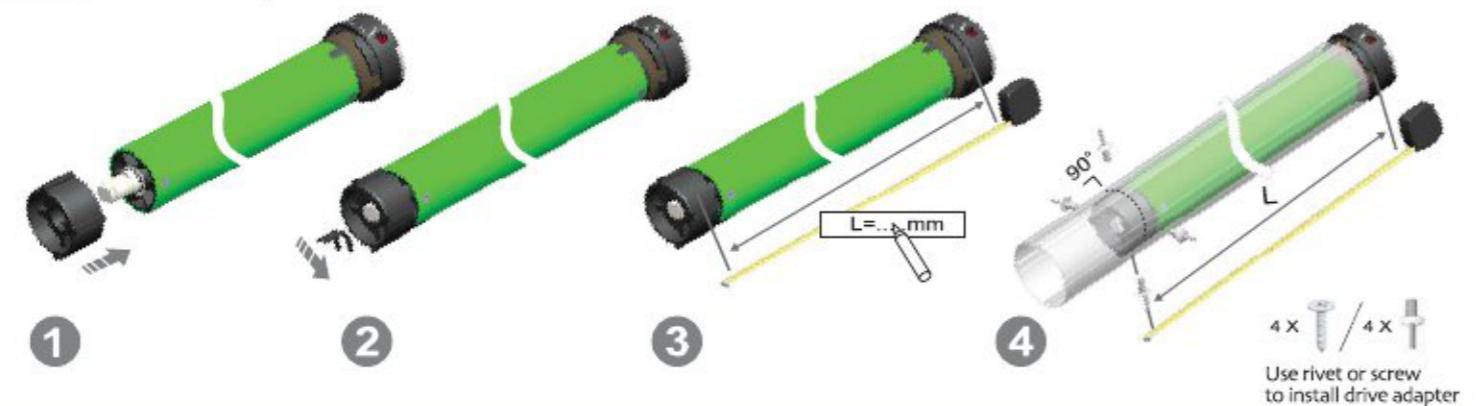


3 Bracket installation

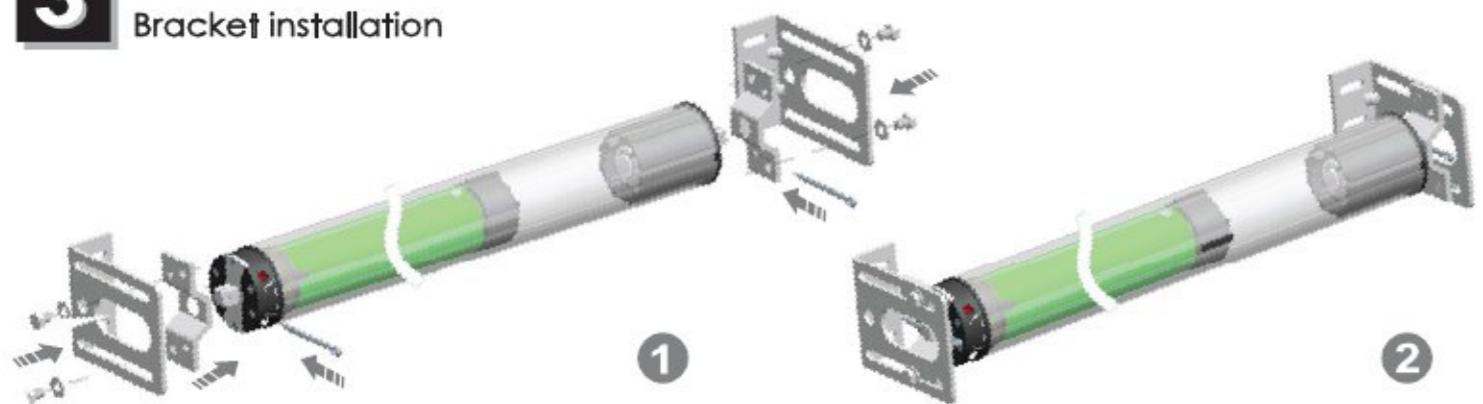

4 Circuit installation

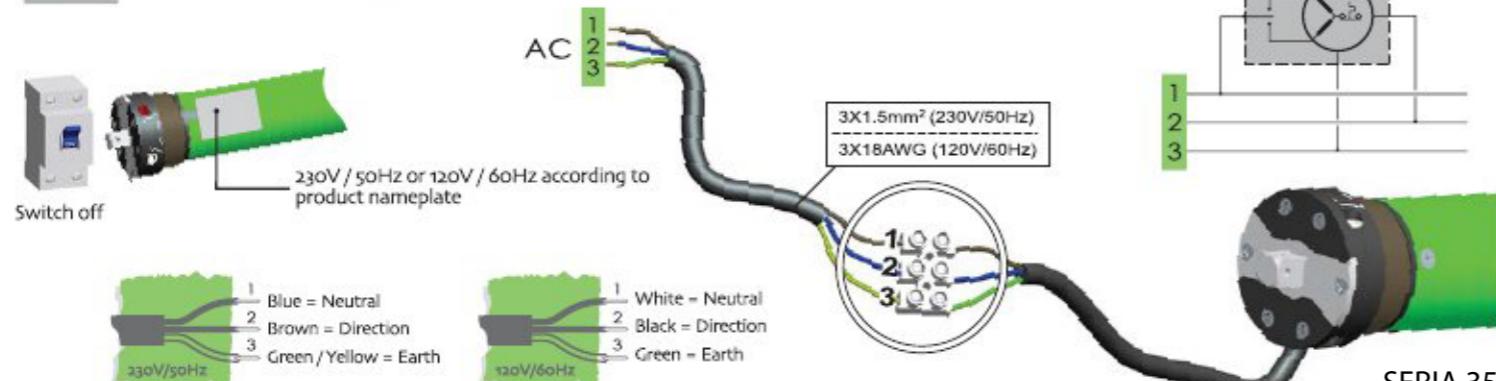


5 Programming the first emitter The first method

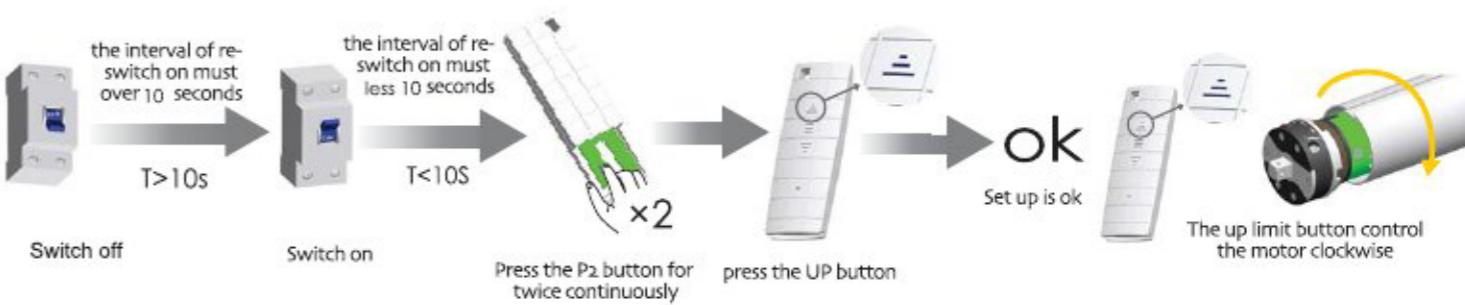


The interval of each button must within 6 seconds of re-setting, otherwise the system will restore the original state.

The second method

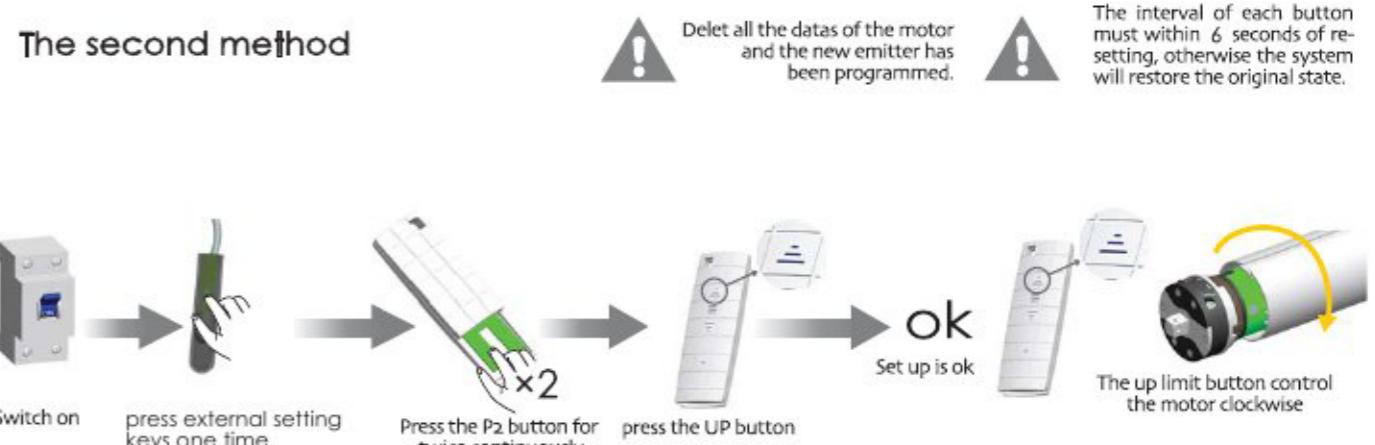


The interval of each button must within 6 seconds of re-setting, otherwise the system will restore the original state.

6 Up limit setting

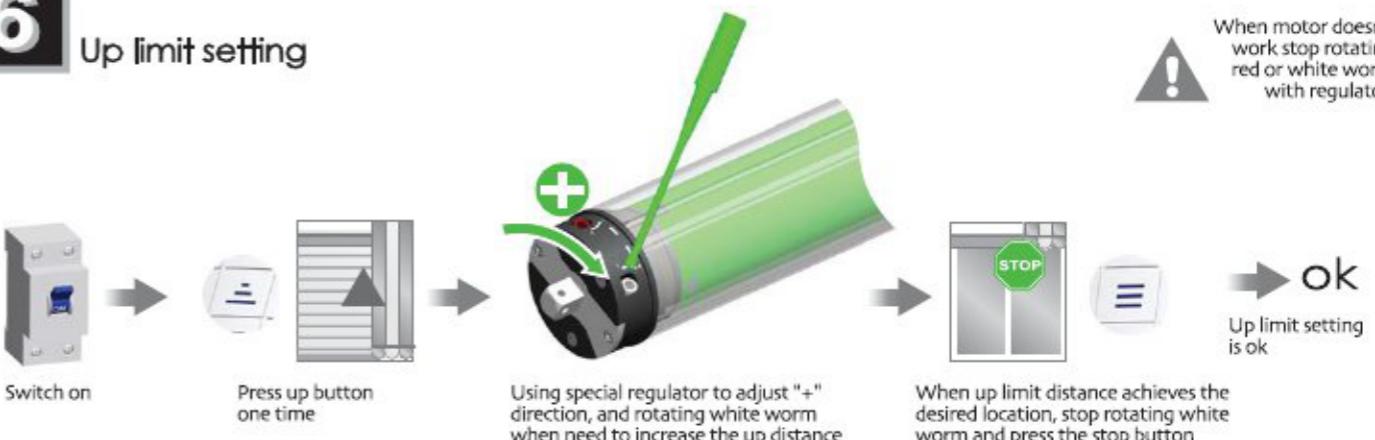


When motor doesn't work stop rotating red or white worm with regulator.

7 Down limit setting

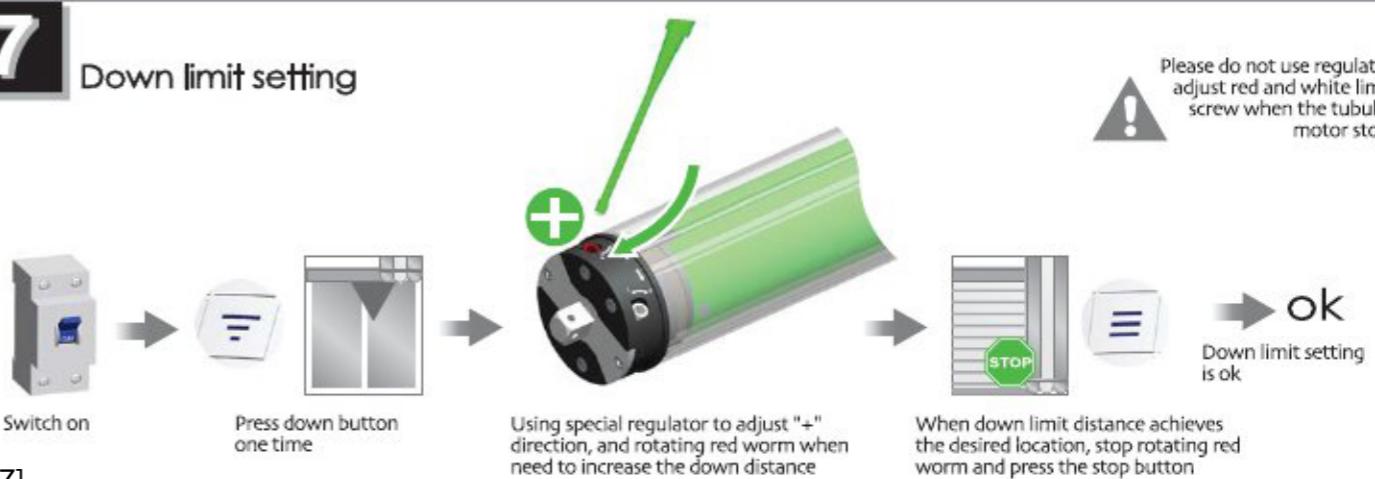

Please do not use regulator adjust red and white limit screw when the tubular motor stop.

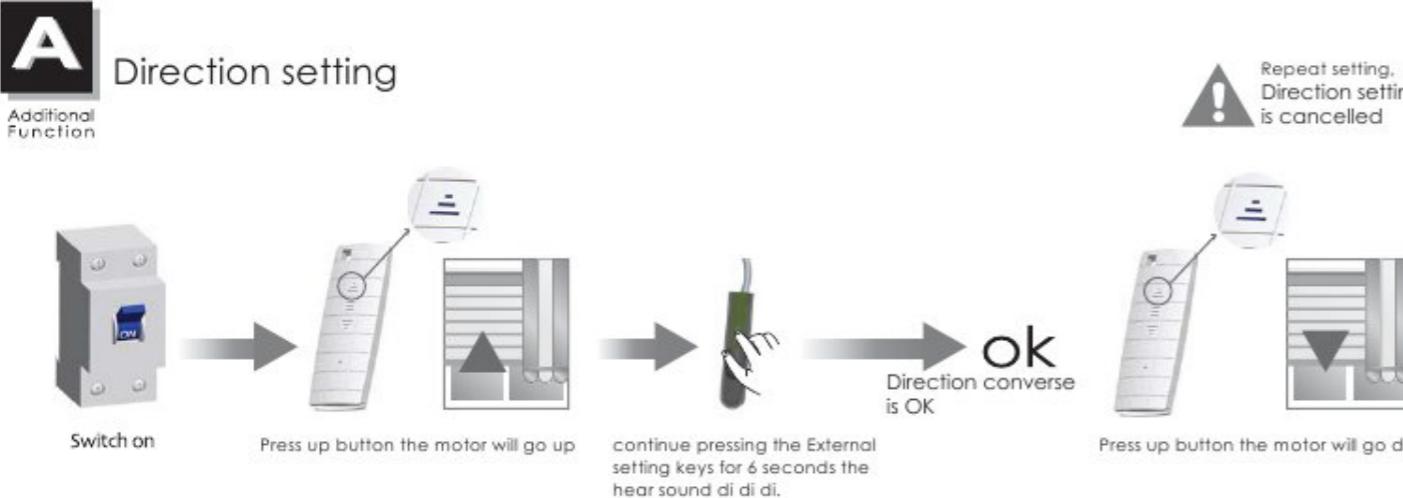

433MHz 868MHz
CE
All controls support 433MHz & 868MHz
All controls support 230V/50Hz & 120V/60Hz

AC TUBULAR MOTOR

