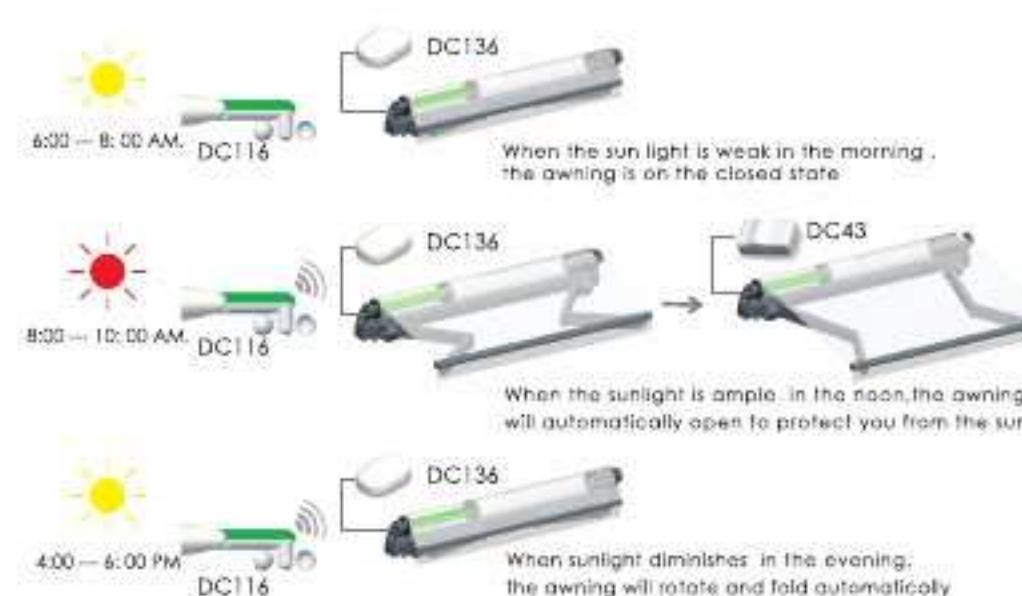
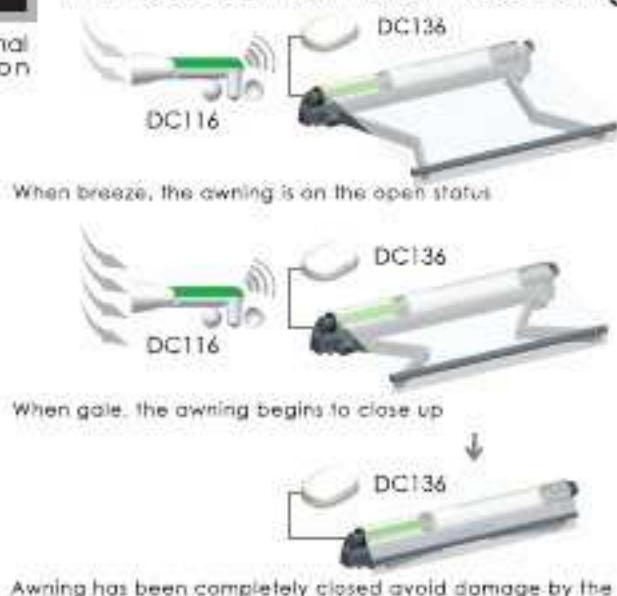


**A**

## Wind-sun sensor working principle

Additional Function

**A**

## Wind-sun sensor grade adjusting reference

Additional Function

Wind grade reference	
0 / 1 grade	15km/h
2 grade	30km/h
3 grade	45km/h

The above grades equal to  
 1: When the grade is "0", "1", the wind reaches over 15Km / h, the awning will fold, LED flashing.  
 2: When the grade is "2", the wind reaches over 30Km / h, the awning will fold,LED flashing.  
 3: When the grade is "3", the wind reaches over 45Km / h, the awning will fold,LED flashing.


Light grade reference	
0 grade	CLOSE
1 grade	15KLUX
2 grade	30KLUX
3 grade	45KLUX
4 grade	60KLUX

The above grades equal to  
 1: When the grade is "0", the light will close  
 2: When the grade is "1", the light reaches over 15 KLUX, the awning will open,LED flashing  
 3: When the grade is "2", the light reaches over 30 KLUX, the awning will open,LED flashing  
 4: When the grade is "3", the light reaches over 45 KLUX, the awning will open,LED flashing  
 5: When the grade is "4", the light reaches over 60 KLUX, the awning will open,LED flashing

**A**


## Matchable R/E/ED Tubular Motor Set up

Additional Function

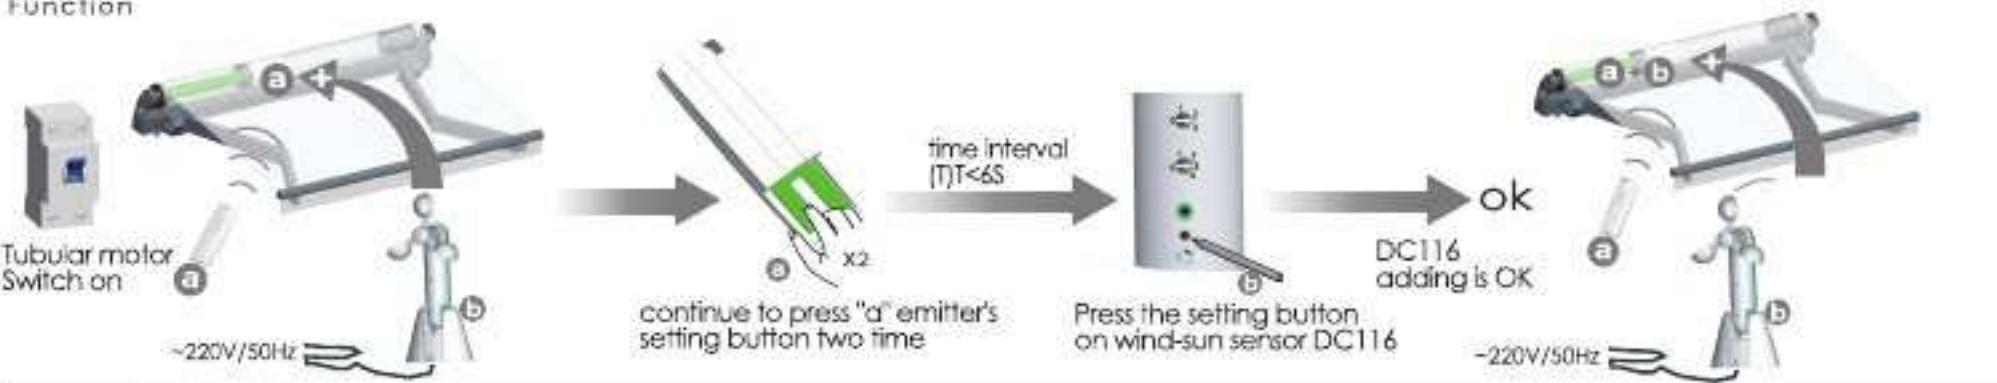**A**


## Matchable DC43 Set up

Additional Function

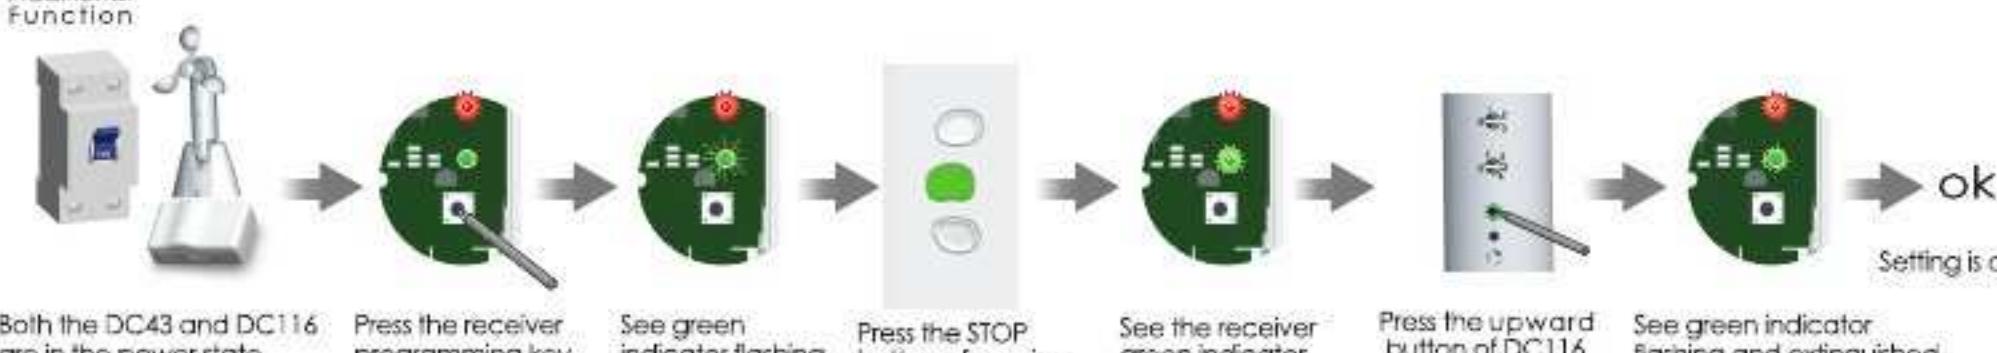**A**

## Matchable DC136 Set up

Additional Function

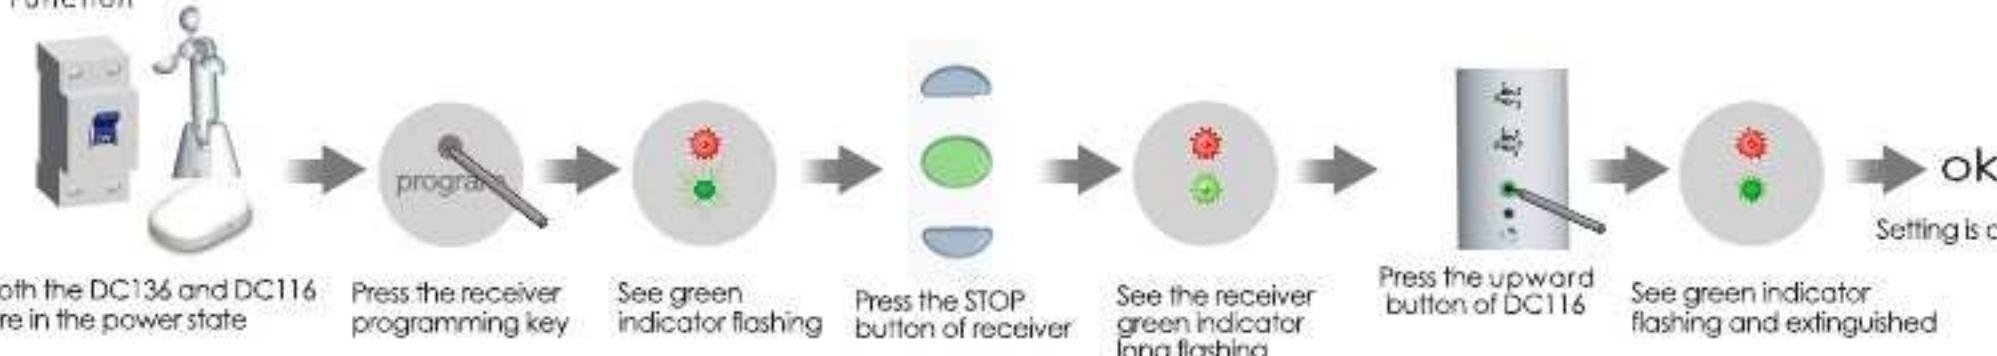


CE FC

All controls support 433MHz &amp; 868MHz

# Control System

## DC116 Wind-sun sensor Specification

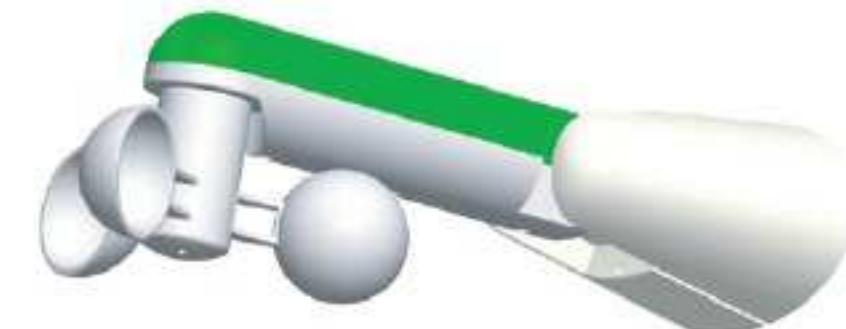


Version No.: A/02

**T**

### Wind-sun sensor specification

Technical Support

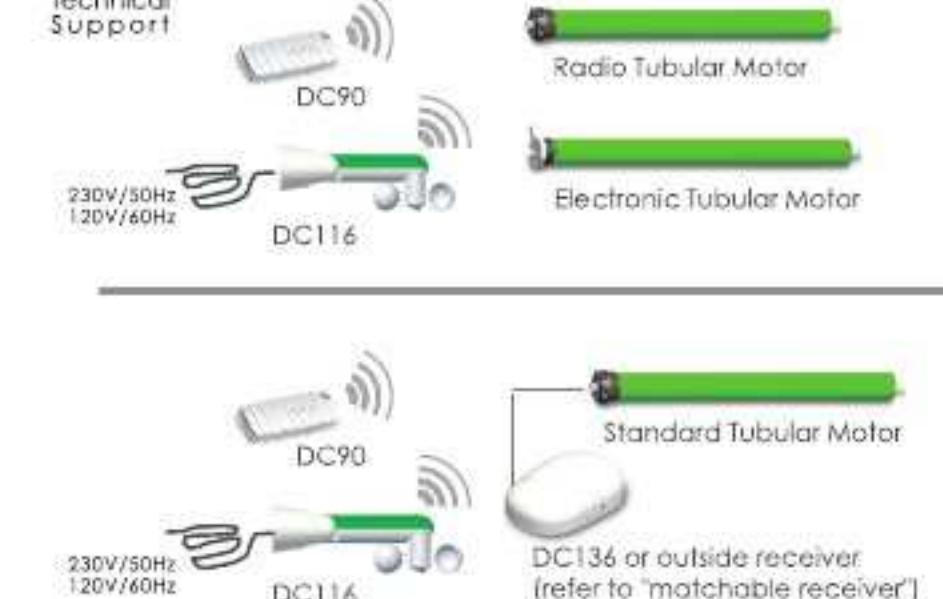

### Wind-sun sensor specification

- Stable performance
- Wireless
- Frequency : 433.92MHz
- Range of validity : outdoor 200 meters
- 2 screws fixed
- AC power : input 230V~50Hz
- Safety code (50 million times without repeat,high security)
- Can set three different wind scales and four different sunlight ranks
- When the wind power is more than the setting value for 3 seconds, the sensor will automatically close awning. After closed, the sensor will not detect the wind in one minute.
- When the light level is more than the setting value for two minutes, the sensor will automatically unfold awning. When the light level does not reach the setting value for 15 minutes, the sensor will automatically close awning.

**Note 1:** Make sure to confirm that sensor DC116 has been programmed with the supporting receiver before use.

**Note 2:** Make sure that the upward button on the transmitter will make the awning close before use.


**T**

### Matchable receiver

Technical Support




### DC116 Button specification

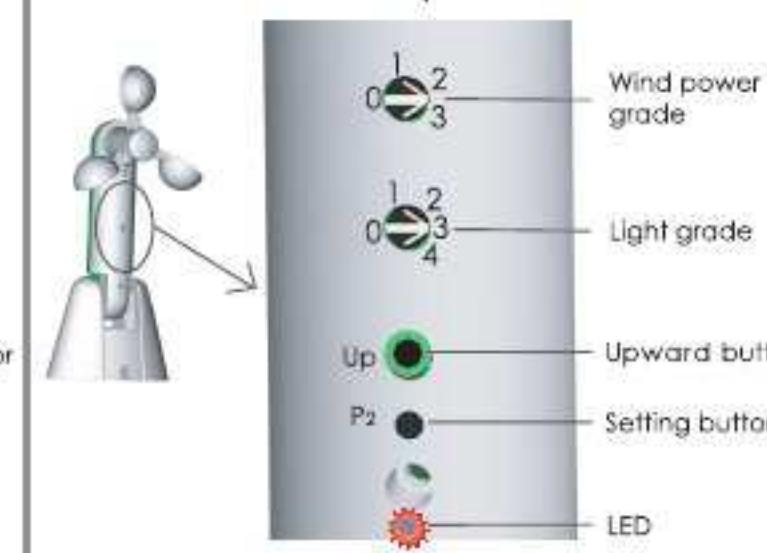**T**

### The best installation position

Technical

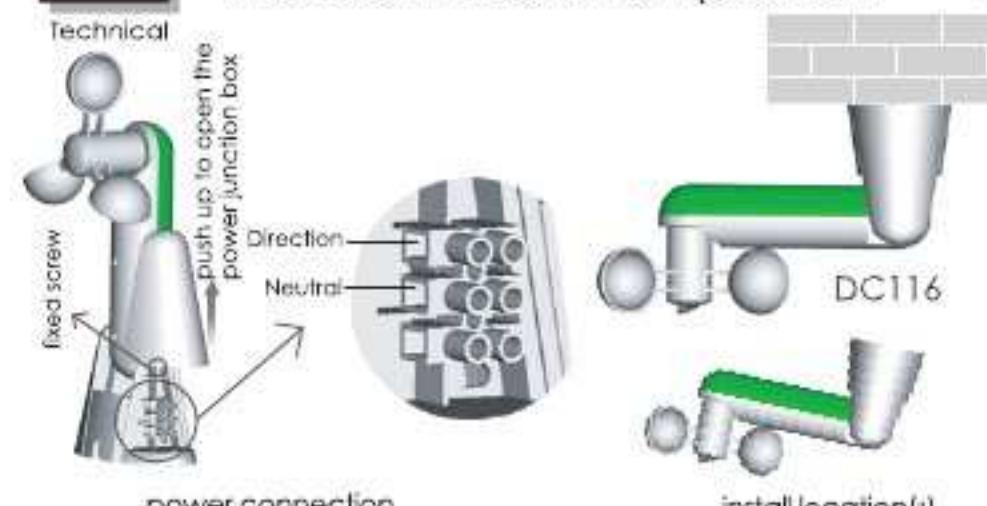**T**

If wants to change the installation site, it needs open the power junction box, loses the fixed screw. After adjusting the installation site, tighten the screws up.

