





The time period for POWER ON should be 5 seconds minimum

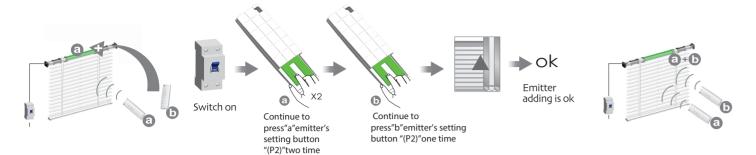



## Cancel the limit



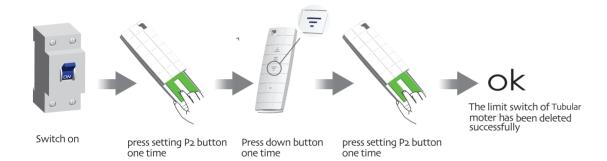



## **Cancel Emitter**



setting with hint of sound

To clean up the emitter means deleting all the memory of emitter and limit switch in the motor receivers







press setting P2 button one time

Press stop button one time

press setting P2 button one time



## Common failures and solutions

	Fail-phenomena	Failure causes	solutions failure recovery	
1	Switch on, the drive adapter runs in one-way operation	setting of limit switch in the motor is uncompleted	re-setting limit switch	
2	motor starts slowly or not work after connect power	a. Power voltage is slow b. Wiring error c. Overload d. Improper installation	a. Adjust power to rated data b. Check circut and correct wiring connecting c. Rated torque associated with the installation of the load d. Re-install the motor	
3	Motor stops suddenly after running	check whether meet resistance force	check whether have redundant stuff in transmission structure	
4	Abnormal sound during roller blinds in operation	Outer tube is too long, led the rolling shutter connects with both sides of bracket too tightly	If idler is active, propering make the tube shorter to avoid too tight status.	



E:Electronic Electronic Limit + Built-in Receiver



Version No.: A/00


















One Electronic motor maximum can store 20 channels, over 20 channels, if still need add new channels, it will be repeating covered in turn from second channel.

Please set the limit position before use, as the setting method please see: set up/down limit position' as reference.

Group control programme is noneffective; deleting programme, adding programme and setting limit switch is effective

.....

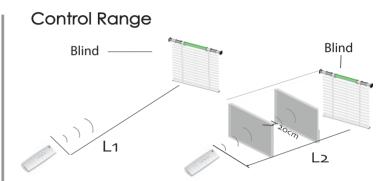

230V/50Hz 200m 35m 120V/60Hz 200m 35m		L1 Open	L2 Partition	
	230V/50Hz	200m	35m	433 92MHz
	120V/60Hz	200m	35m	10017271112

**Button specification** 

Electronic Limit + Built-in Receiver + Fabric of awnings tighten automatically













miniaturised emitter DC61





miniaturised emitter DC115



DC279









Single-channel time emitter DC112

DC137

Attention

DC170

Portable Single-channel

Portable double-channel wall-mounted emitter wall-mounted emitter

Wireless wind-sun sensor DC83

UP STOP DOWN SETTING BUTTON

DM25TE













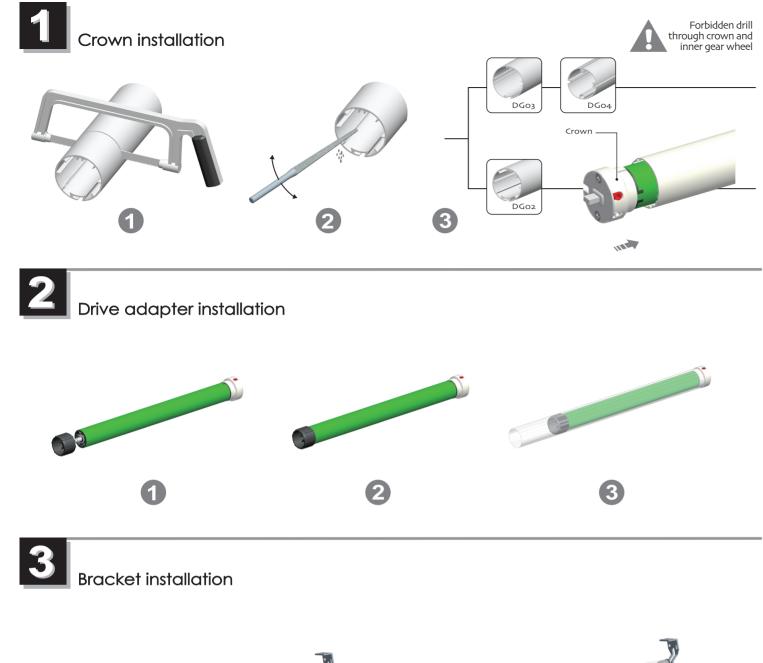



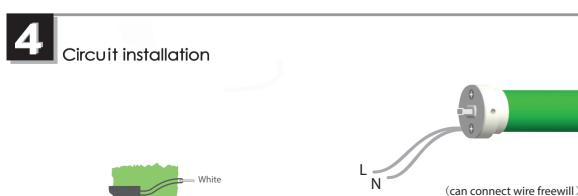

Standard kit



Press the stop button continuously

for over 5 times untill the motor roll

up and down for hint, that means

the upper limit setting successful.



Code matching setting with hint of sound



The interval of each button must within 4 seconds of resetting, otherwise the system will restore the original state.


Set up is ok


Press the stop button continuously for

over 5 times until the motor roll up


and down for hint, that means the

lower limit setting successful.

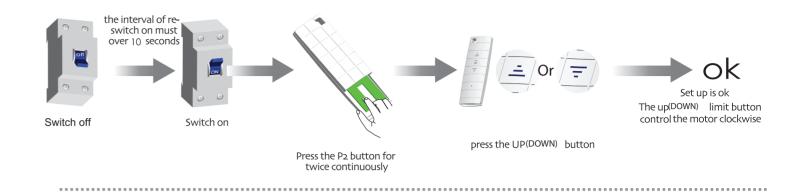

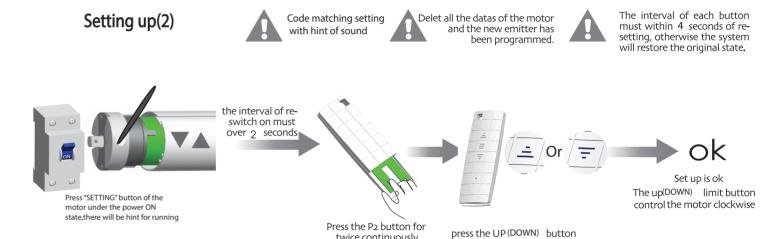

twice continuously

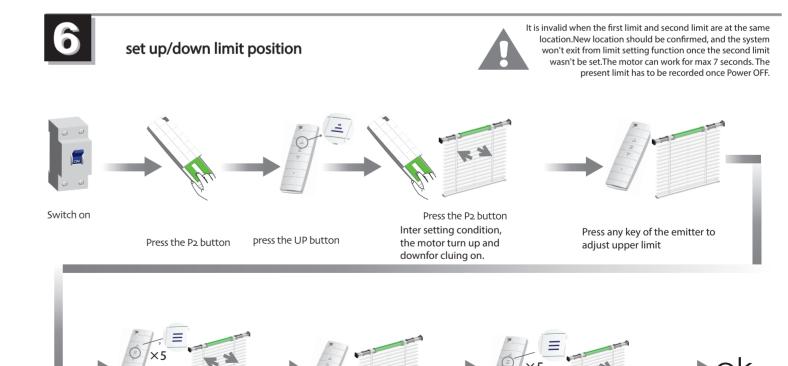

Press any key of the

emitter to adjust

lower limit