



Additional Function

Time Setting



The time difference between setting up limit time and down limit cannot be less than 32 minutes. Otherwise the Error will show on the LCD screen of transmitter under automatic mode and random mode simultaneously, time set is invalid, and set status is exited.



Pressing  STOP button can exit from time setting



Press "setting button" to switch to Auto mode or Random mode.



Press "Time set button" for 5 seconds, the up timing time displays.




Press "Time set button" again, the up timing time (hour mark) twinkles.




Press "up button" or "down button" to adjust the timing time (hour mark) of display




Press "Time set button", the up timing time (minute mark) of this channel twinkles.

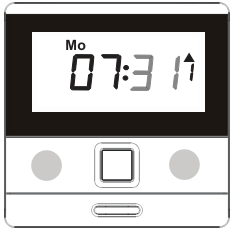


Press "up button" or "down button" to adjust the timing time (minute mark) of display screen.

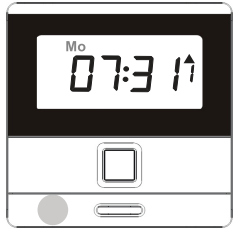


Press "Time set button", the up timing time (week mark) of this channel twinkles.

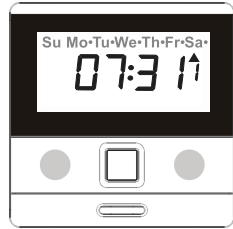


Press "up button" or "down button" to adjust the timing time (week mark) of display

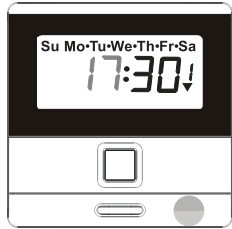


Press "Time confirmation button" to confirm the up timing time of this channel. In the meantime the down timing time(hour mark) twinkles.

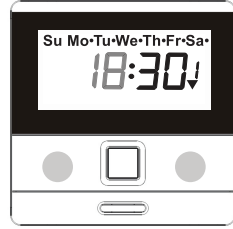

Press "up button" or "down button" to adjust the down timing time (hour mark) of display screen.

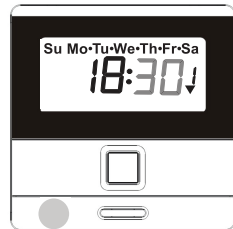

Press "Time set button", the down timing time (minute mark) of this channel twinkles.

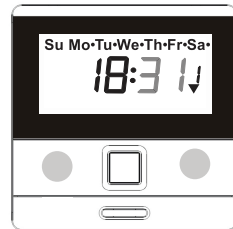

Press "up button" or "down button" to adjust the down timing time (hour mark) of display screen.



Press "stop button", exit the adjustment of the timing time and back to present channel and present time.




Self-lock function



Simultaneously press "Time set button" and "Time confirmation button" repeatedly for 3 seconds, self-lock function exit.



Simultaneously press "Time set button" and "Time confirmation button" for 3 seconds

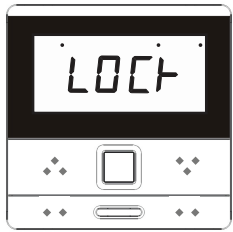

The display screen will show "lock", the self-lock function starts and the button is ineffective.



Additional Function

Setting up and add emitter




The interval of different button must within 10 seconds for all setting, otherwise the system will restore the original state.



One receiver store 20 emitters channels at most, and one channel of emitter can control 20 receivers at most.



Switch on

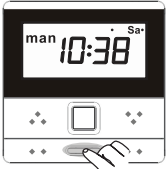

Long press "setting button" for 5 seconds



the "LCD" twinkles.



Press the receiver the STOP button



the "LCD" long



Press the UP limit button of transmitter




See "LCD" GOOD and extinguished

Setting is ok




Additional Function

Delete all the emitter channels

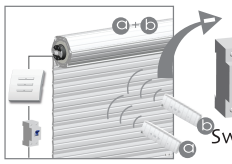

Switch on

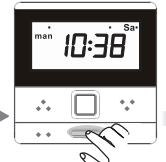

Long press "setting button" for 5 seconds



the "LCD" twinkles.



Press the receiver of the STOP button



Press the DOWN limit button of transmitter



See "LCD" GOOD and extinguished



Delete all the emitter channels successfully



Additional Function


Dot-move setting



Repeat setting, function is cancelled




Switch on

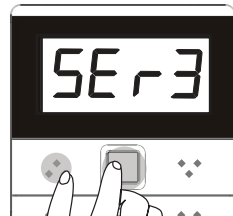

Continue pressing the STOP button and UP button of the receiver for 6 seconds
 
>6s



See "LCD" GOOD and extinguished

ok

Dot move setting is OK




Additional Function

Delete all the emitter channels



Switch on

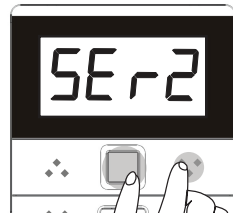

Continue pressing the STOP button and DOWN limit button of thereceiver for 6 seconds


>6s



See "LCD" GOOD and extinguished

ok

Delete all the emitter channels successfully

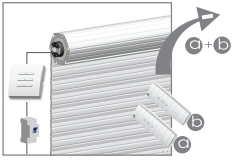


Additional Function

The reverse of direction setting



Switch on

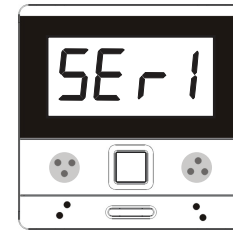

Continue pressing the UP button and DOWN limit button of the receiver for 6 seconds



See "LCD" GOOD and extinguished



Successful change the direction