




Receiver installation

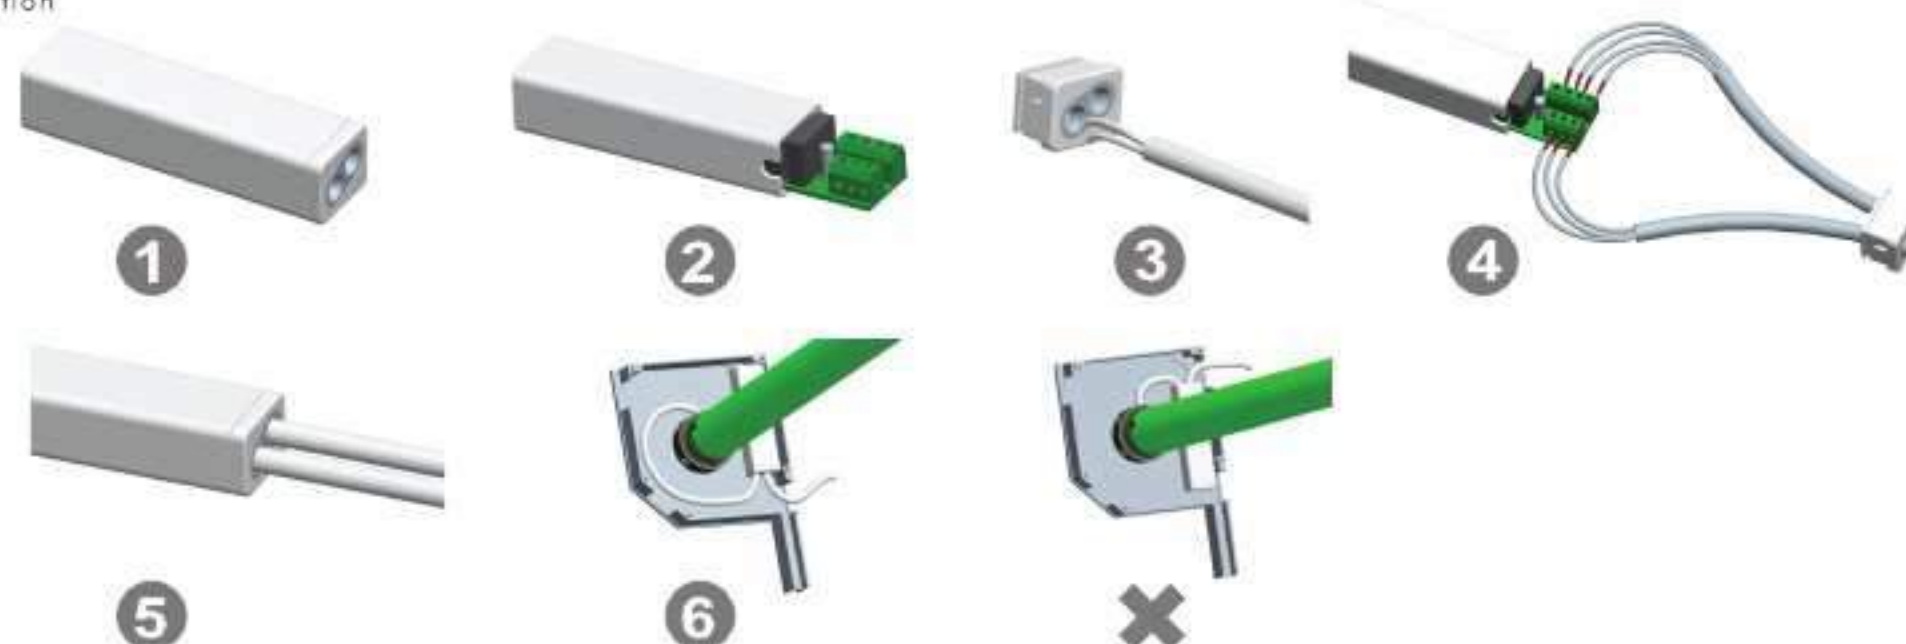


Set up




Only when fasten the installation of DC73A can do as the following, or will affect the function usage of products



The interval time to press different button must $1s < T < 6s$ for all setting.

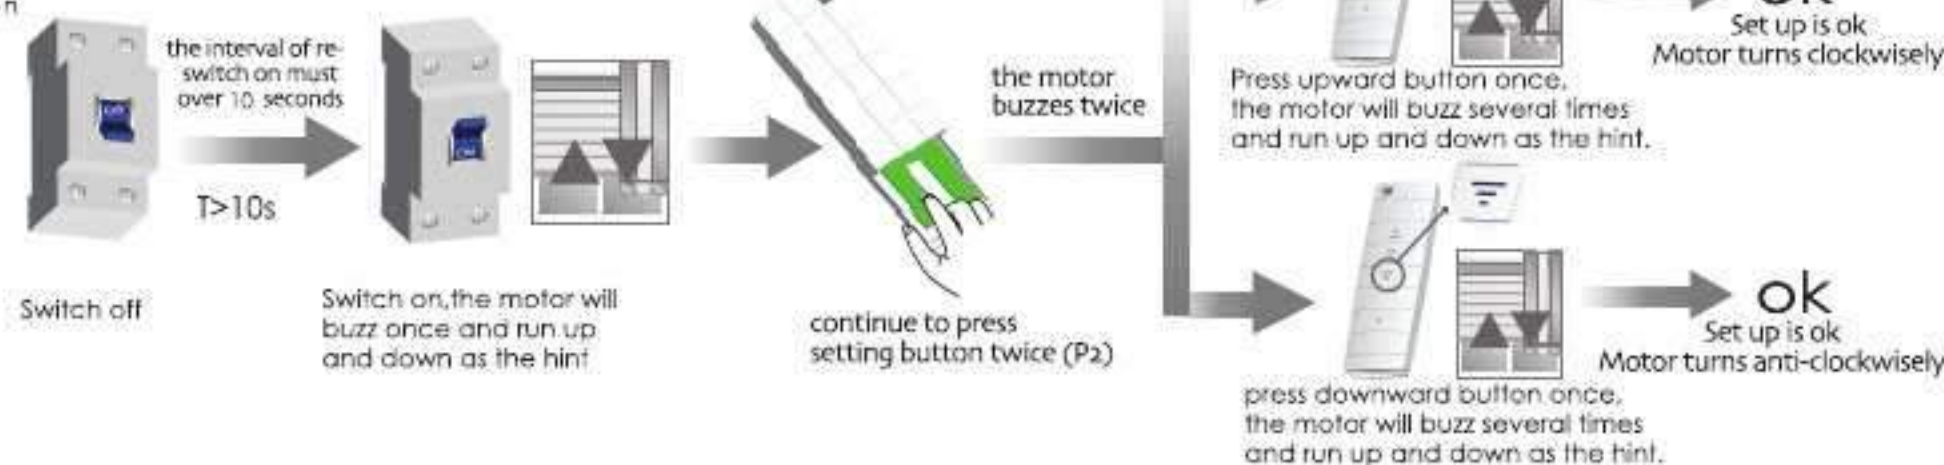


Add Emitter

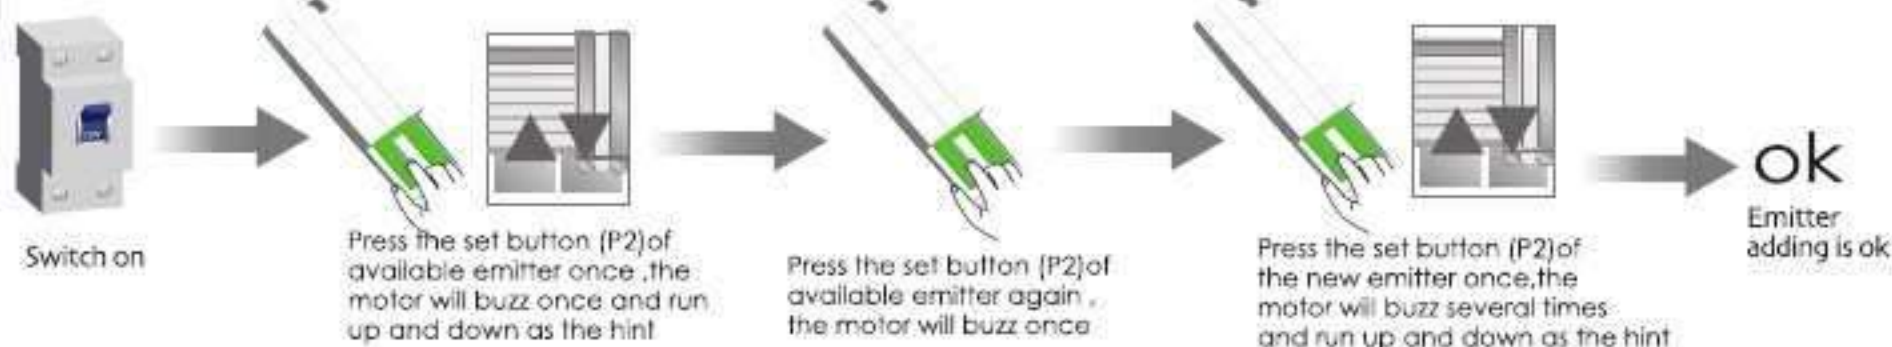

Dot-move setting



 Cancel Emitter



All controls support 433MHz & 868MHz
All controls support 230V/50Hz & 120V/60Hz

DC73A Control System Specification

Version NO. : B/01



Technical Support

1.

5-channel emitter = single channel emitter $\times 5$
One channel of emitter can control 20 receivers at most at the same time.


2.

DC73A Receiver
One DC73A Receiver maximum can store 20 channels, over 20 channels, if still need add new channels, it will be repeating covered in turn from the second channel.



In the process of set up emitter and DC73A receiver, After the success of each set, tubular motor beep several times, then tubular motor move clockwise and counterclockwise one time as remind
Receiver in the mode of dot function, press up key and down key within 2 seconds, emitter control motor working in dot function; if continuous press more than 2 seconds motor will last working.
Group control channel match code is unworkable.

Control Range

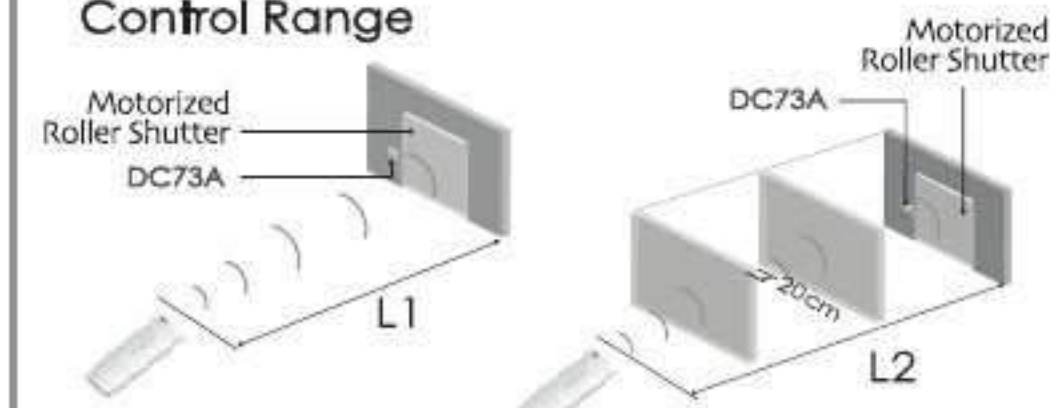

	L1 Open	L2 Partition	Emission frequency
230V/50Hz	200m	35m	433.92MHz
120V/60Hz	200m	35m	



Matchable emitter




PC14, DC48, DC49, DC44, DC61
press up and stop button at the same time that means P2 button.



Matchable tubular motor



Circuit installation

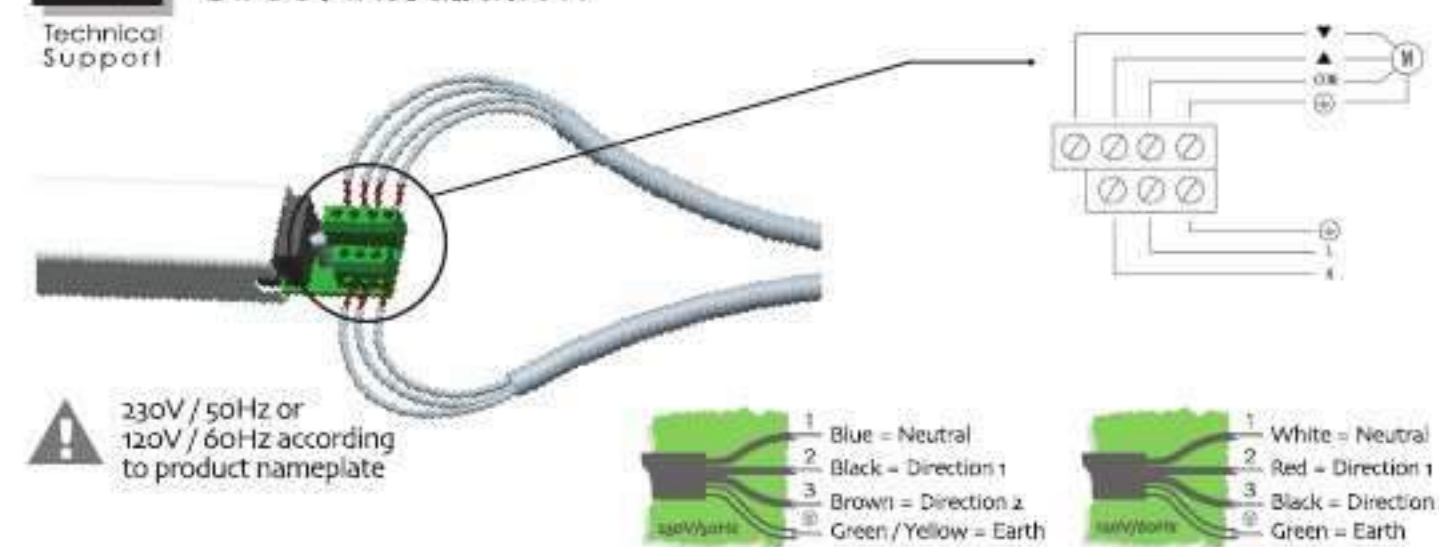

The best installation distance



- The shortest distance between receiver and ground $\geq 1.5m$
- The shortest distance between receiver and roof $\geq 0.3m$
- The shortest distance between receiver and receiver $\geq 0.2m$