




Add Emitter

Additional Function


In the process of adding emitter,the time interval between pressing the different keys(T)1S≤T≤6S,otherwise the receiver will quit the status of adding emitter.

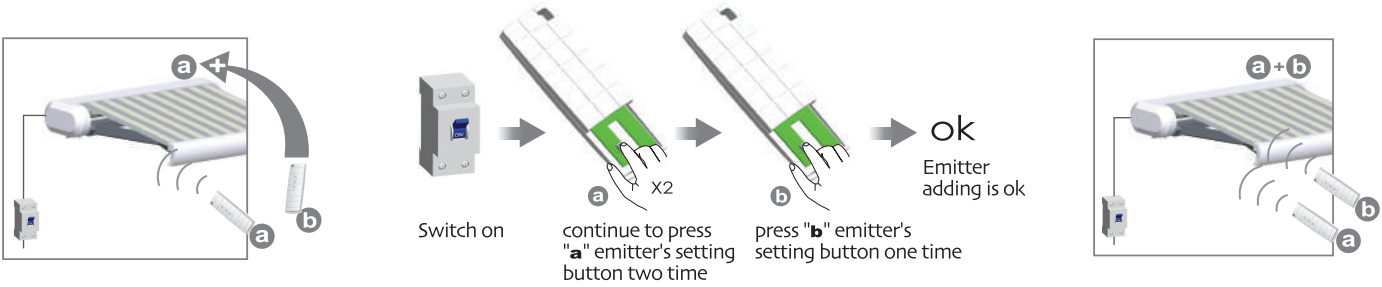

Delete the limit switch of Electronic D type full cassette awnings

Additional Function

In the process of clearing Electronic D type limit,the time interval between pressing the different keys (T)1S≤T≤6S,otherwise the receiver will quit the status of clearing Electronic D type limit.

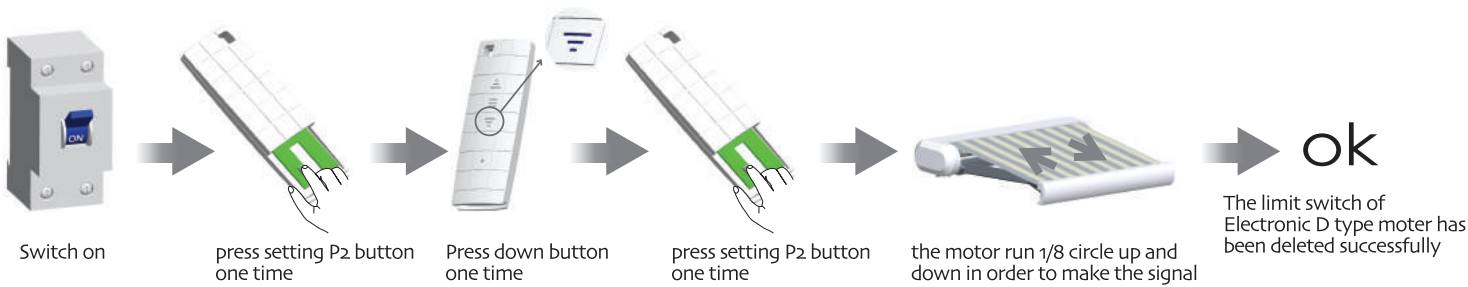


Cancel Emitter

Additional Function

In the process of clearing emitter,the time interval between pressing the different keys (T)1S≤T≤6S,otherwise the receiver will quit the status of clearing emitter.

To clean up the emitter means deleting all the memory of emitter and limit switch in the Electronic D type motor receivers

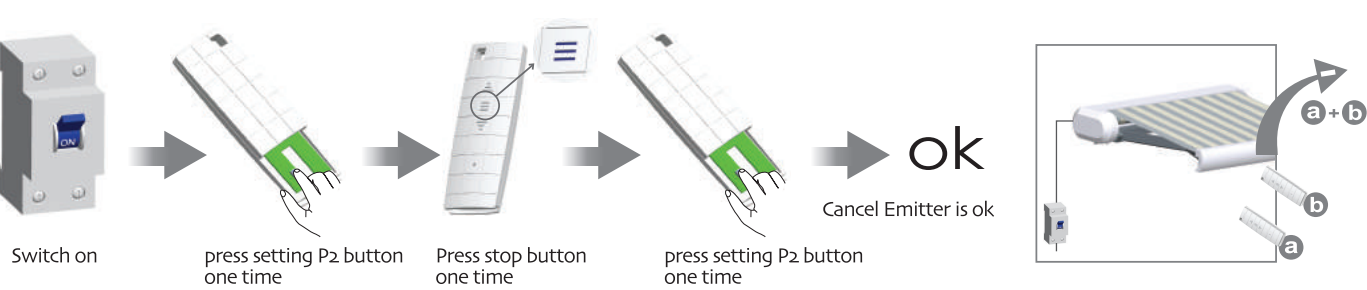

Common failures and solutions

Attention

	Fail-phenomena	Failure causes	solutions failure recovery
1	Switch on, the drive adapter runs in one-way operation	setting of limit switch in the motor is uncompleted	re-setting limit switch
2	motor starts slowly or not work after connect power	a. Power voltage is slow b. Wiring error c. Overload d. Improper installation	a. Adjust power to rated data b. Check circut and correct wiring connecting c. Rated torque associated with the installation of the load d. Re-install the motor
3	Motor stops suddenly after running	Motor stops suddenly after running	Motor will automatically resume work after 20 minutes cooling
4	Abnormal sound during roller blinds in operation	Outer tube is too long, led the rolling shutter connects with both sides of bracket too tightly	If idler is active, propering make the tube shorter to avoid too tight status.




All controls support 433MHz & 868MHz
All controls support 230V/50Hz & 120V/60Hz



Electronic D

Electronic Limit + Built-in Receiver
+ Fabric of awnings tighten automatically function
+ Resistance and stop function

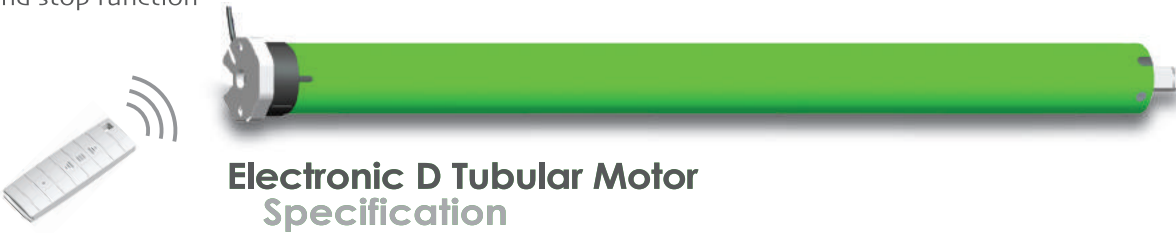

Version No. : A/00



Technical Support

1.

5-channel emitter = single channel emitter x 5

One channel of emitter can control 20 receivers at most at the same time.


2.

Electronic D Tubular Motor
One Electronic D motor maximum can store 20 channels, over 20 channels, if still need add new channels, it will be repeating covered in turn from second channel.



Please set the limit position before use, as the setting method please see: 6 set the limit switch for full cassette awnings of Electronic D type
Group control programme is noneffective; deleting programme, adding programme and setting limit switch is effective

Control Range

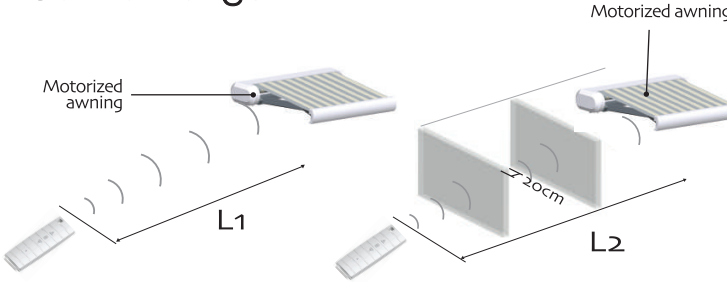

	L1 Open	L2 Partition	Emission frequency
230V/50Hz	200m	35m	433.92MHz
120V/60Hz	200m	35m	



Matchable emitter and motors


Technical Support




DC48 DC49 DC44 DC61
Pressing up button and stop button equals P2 button



Button specification

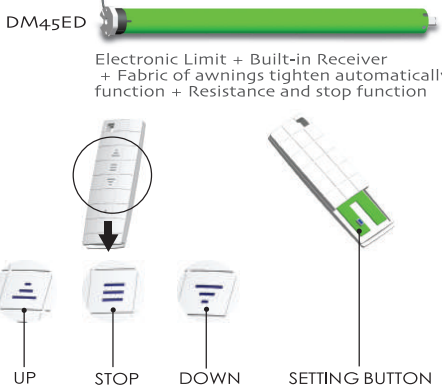


Attention

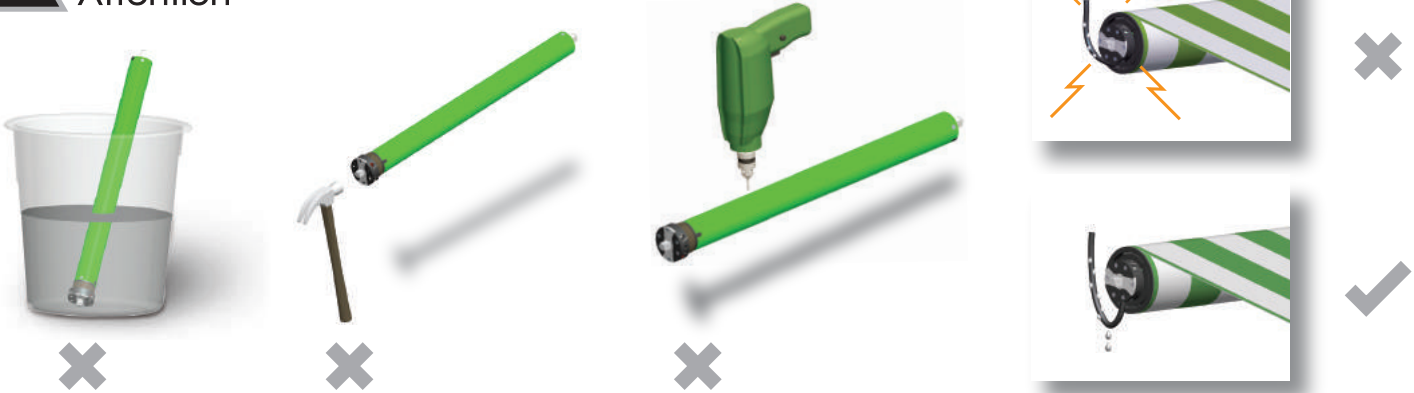


1

Crown installation

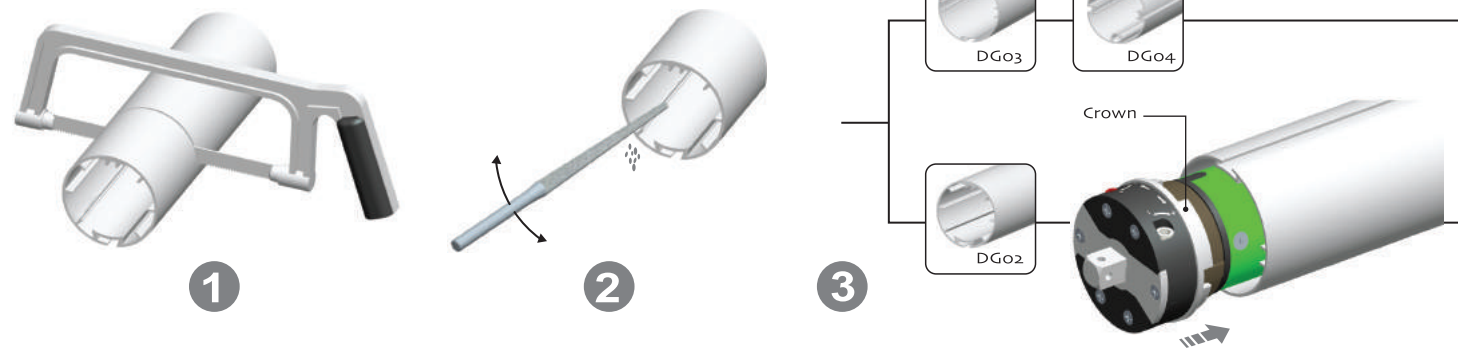


2

Drive adapter installation

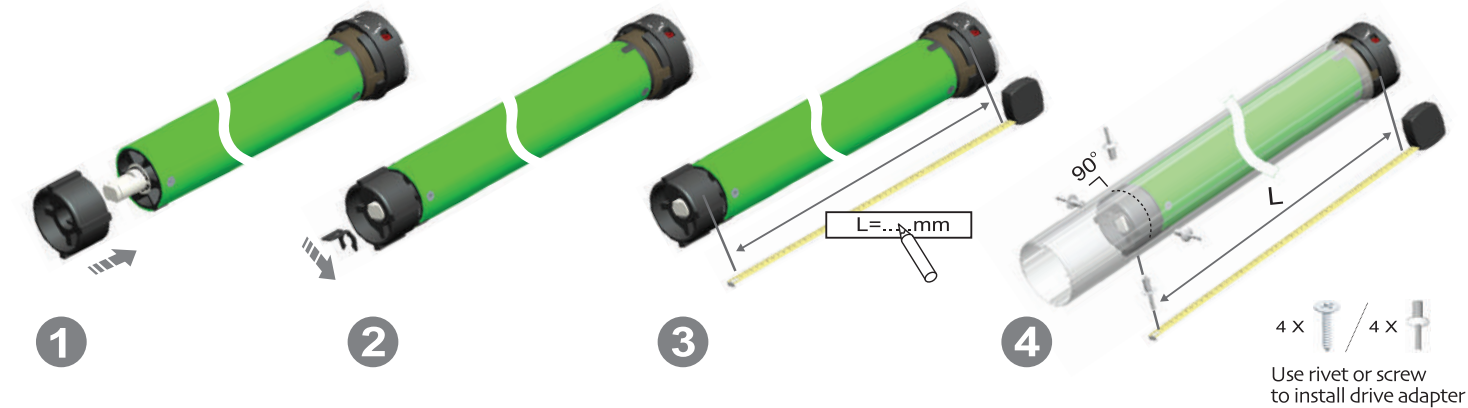


3

Bracket installation

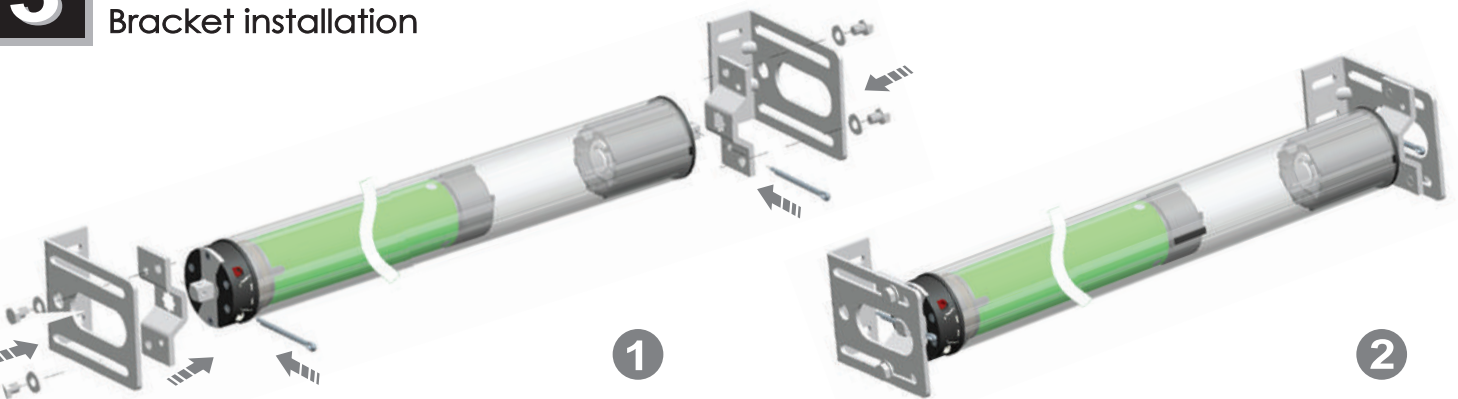



4

Circuit installation

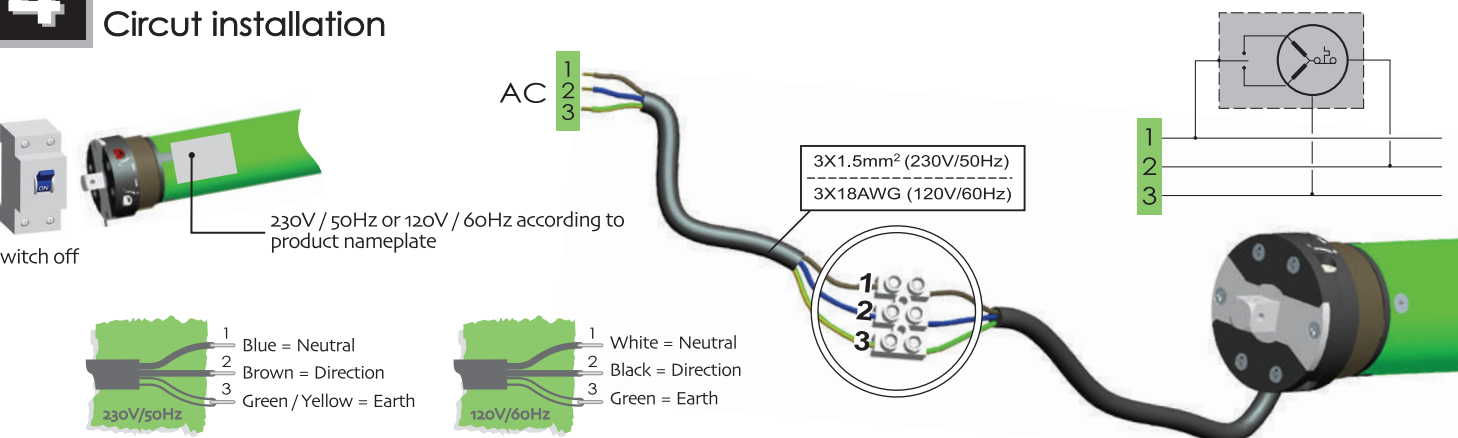


5

set up

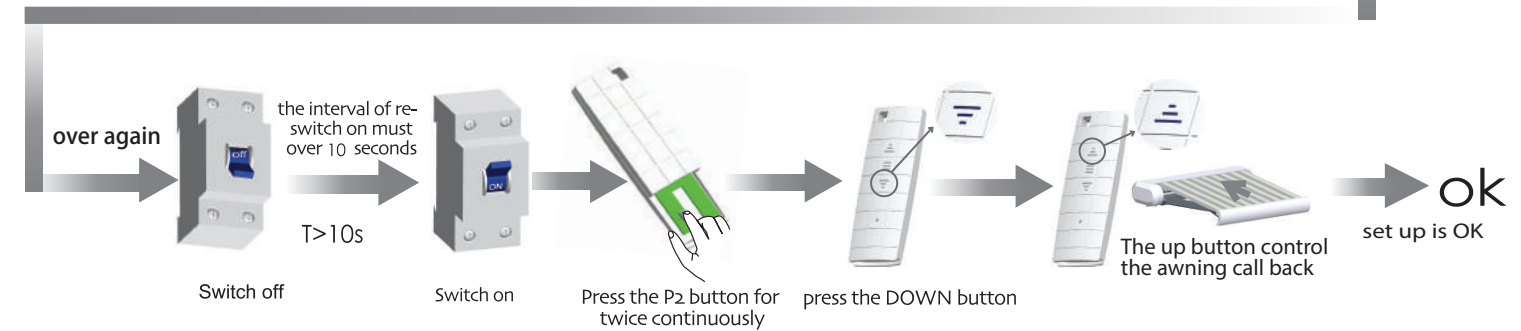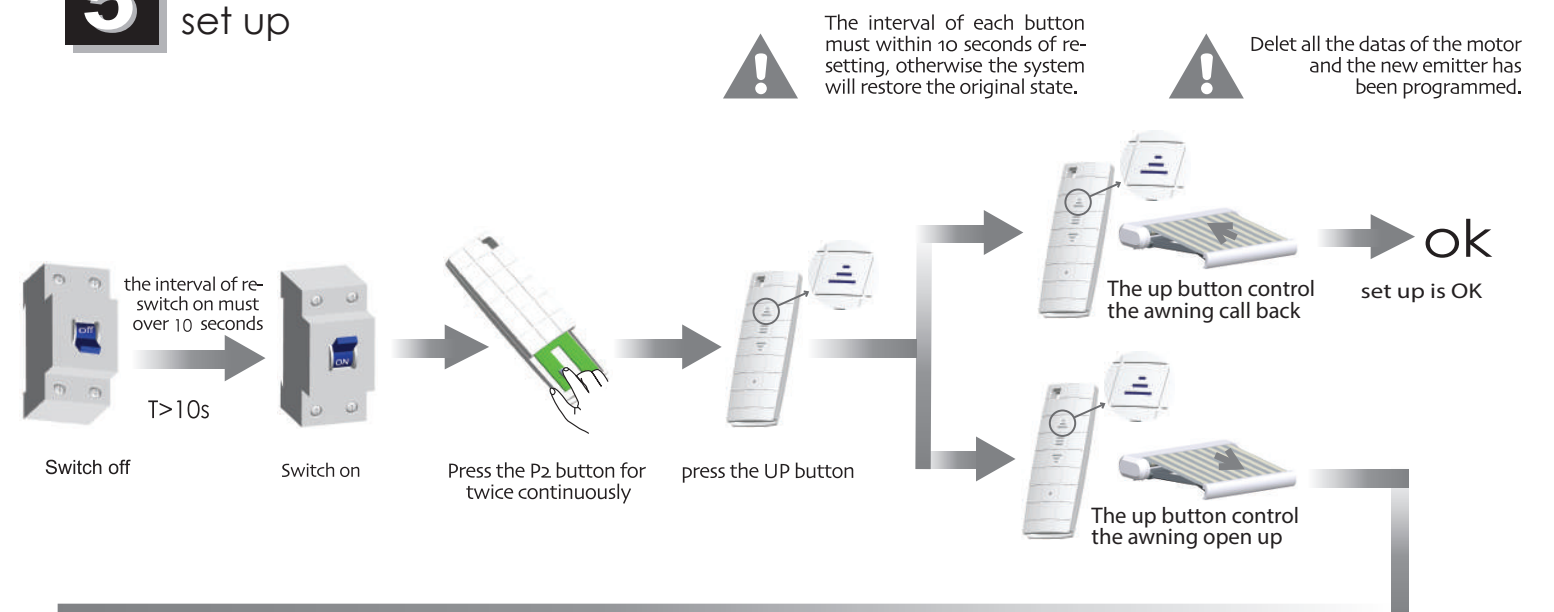

6

Set the limit switch for full cassette awnings of Electronic D type

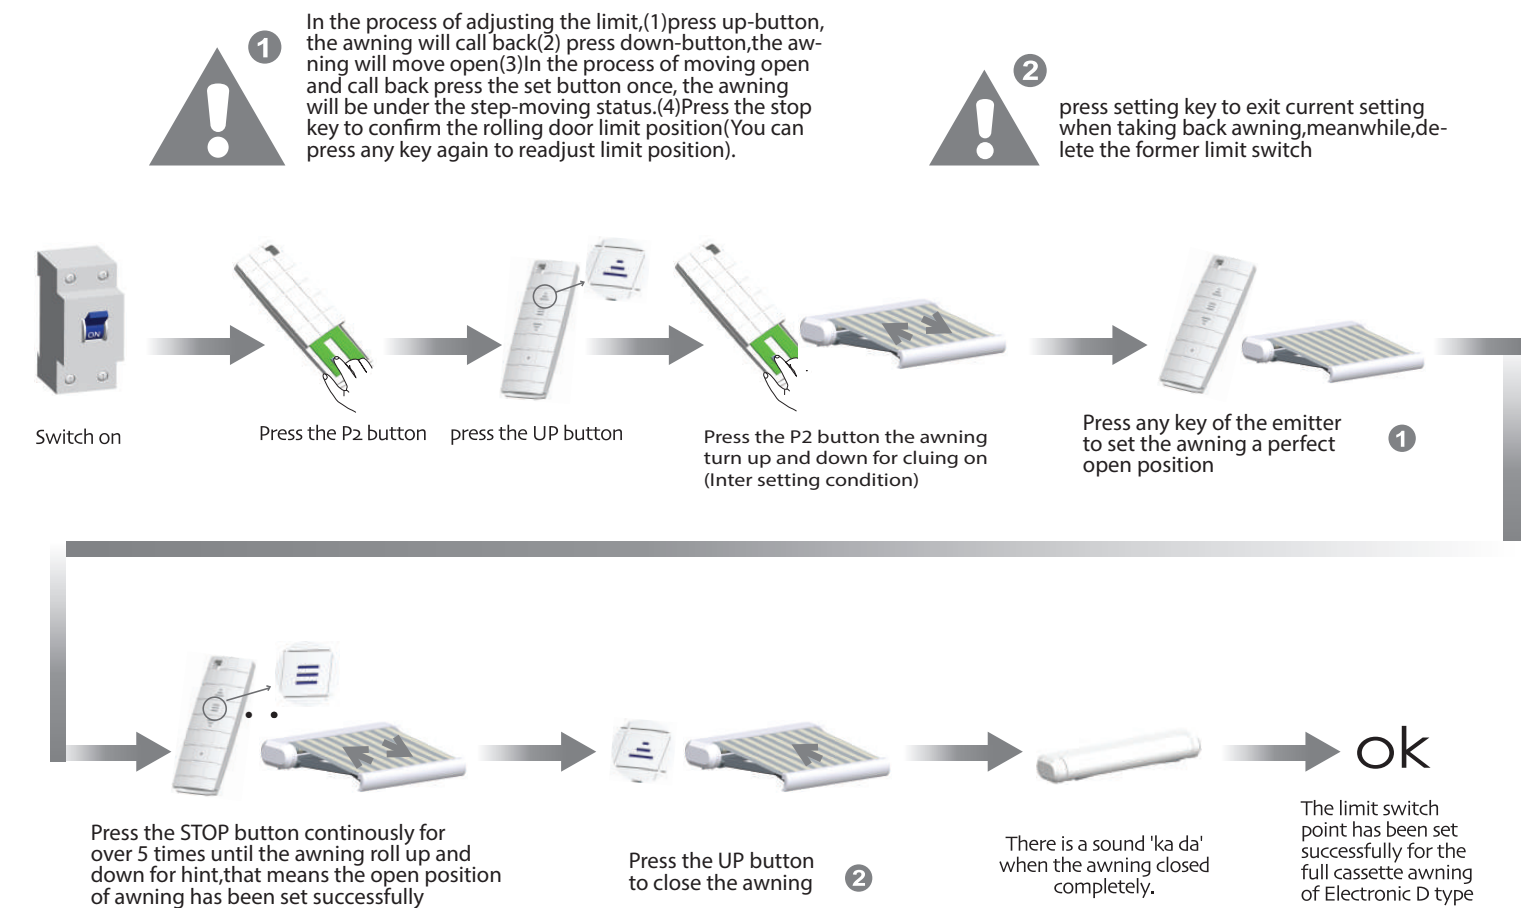

The limit switch point has been set successfully for the full cassette awning of Electronic D type