





The time period for POWER ON should be 5 seconds minimum



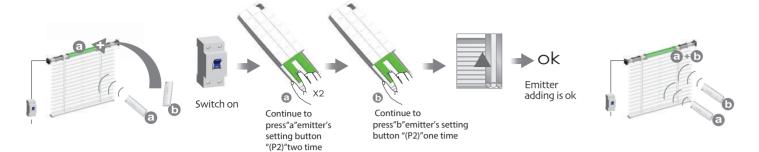

## Cancel the limit



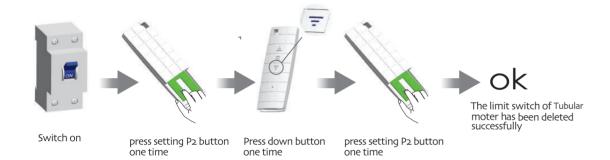




## **Cancel Emitter**



setting with hint of sound

To clean up the emitter means deleting all the memory of emitter and limit switch in the motor receivers

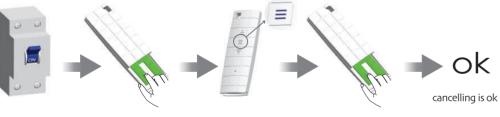



Switch on

press setting P2 button one time

Press stop button one time

press setting P2 button one time



## Common failures and solutions

	Fail-phenomena	Failure causes	solutions failure recovery	
1	Switch on, the drive adapter runs in one-way operation	setting of limit switch in the motor is uncompleted	re-setting limit switch	
2	motor starts slowly or not work after connect power	a. Power voltage is slow b. Wiring error c. Overload d. Improper installation	a. Adjust power to rated data b. Check circut and correct wiring connecting c. Rated torque associated with the installation of the load d. Re-install the motor	
3	Motor stops suddenly after running	check whether meet resistance force	check whether have redundant stuff in transmission structure	
4	Abnormal sound during roller blinds in operation	Outer tube is too long, led the rolling shutter connects with both sides of bracket too tightly	If idler is active, propering make the tube shorter to avoid too tight status.	



E:Electronic Electronic Limit + Built-in Receiver



Version No.: A/0 0













One channel of emitter can control 20 receivers at most at the same time.






One Electronic motor maximum can store 20 channels, over 20 channels, if still need add new channels, it will be repeating covered in turn from second channel.

Please set the limit position before use, as the setting method please see: set up/down limit position' as reference.

Group control programme is noneffective; deleting programme, adding programme and setting limit switch is effective

.....

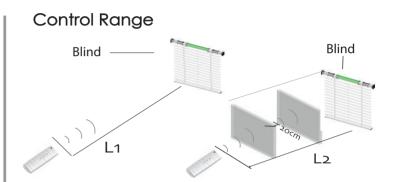

DM25TE

230V/50Hz   200m   35m   433.92MHz   120V/60Hz   200m   35m			L1 Open	L2 Partition	
		230V/50Hz	200m	35m	433 92MHz
		120V/60Hz	200m	35m	100.7 2.711.2

**Button specification** 

Electronic Limit + Built-in Receiver + Fabric of awnings tighten automatically



Matchable emitter and motors









DC170



miniaturised emitter DC61



Single-channel

miniaturised emitter DC115



DC279



time emitter



Single-channel time emitter DC112

DC137

Portable Single-channel wall-mounted emitter

Portable double-channel wall-mounted emitter

Wireless wind-sun sensor DC83

UP STOP DOWN SETTING BUTTON















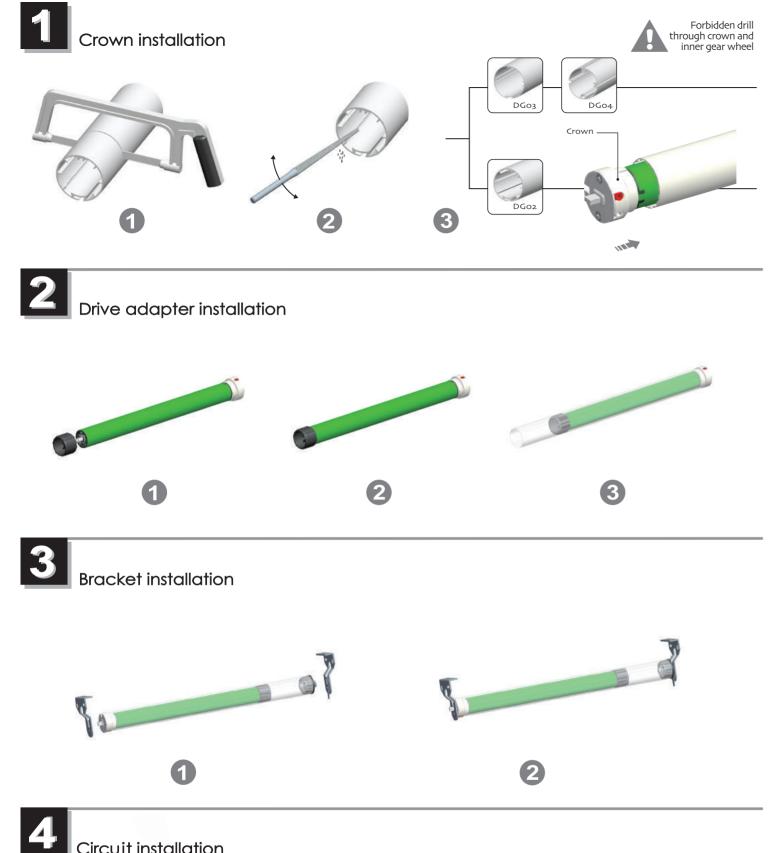

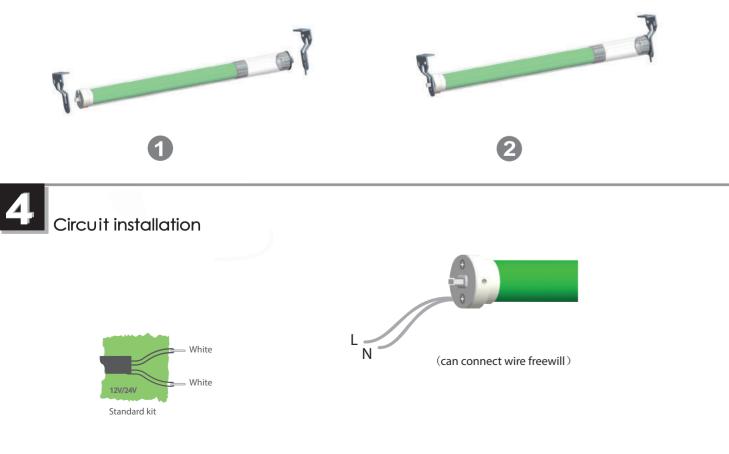







Code matching setting with hint of sound



The interval of each button must within 4 seconds of resetting, otherwise the system will restore the original state.

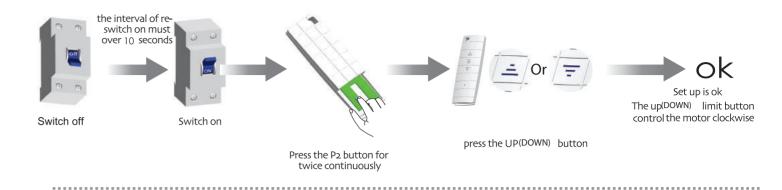

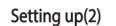




Code matching setting with hint of sound

Delet all the datas of the motor and the new emitter has been programmed.




The interval of each button must within 4 seconds of resetting, otherwise the system will restore the original state.

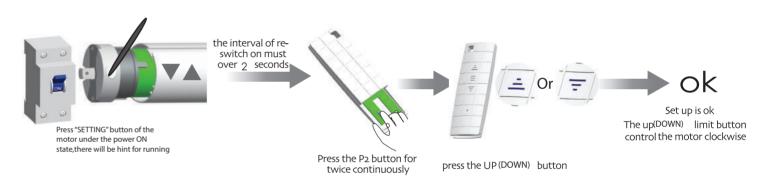





It is invalid when the first limit and second limit are at the same location. New location should be confirmed, and the system won't exit from limit setting function once the second limit wasn't be set. The motor can work for max 7 seconds. The present limit has to be recorded once Power OFF.

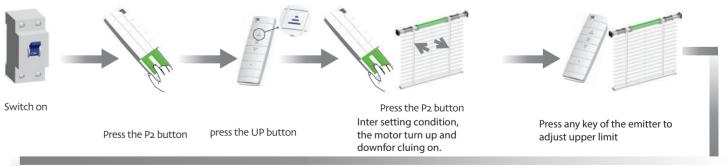



Press the stop button continuously for over 5 times untill the motor roll up and down for hint, that means the upper limit setting successful.

Press any key of the emitter to adjust lower limit

Press the stop button continuously for over 5 times until the motor roll up and down for hint, that means the lower limit setting successful.