



Additional
Function


Effective channel selection



The LCD screen will quit the channel show if it shows for 2 seconds and is not switched. The transmitter will remain this channel and show the current time.




When the transmitter Shows channel , press adjusting button to switch this channel effective and ineffective

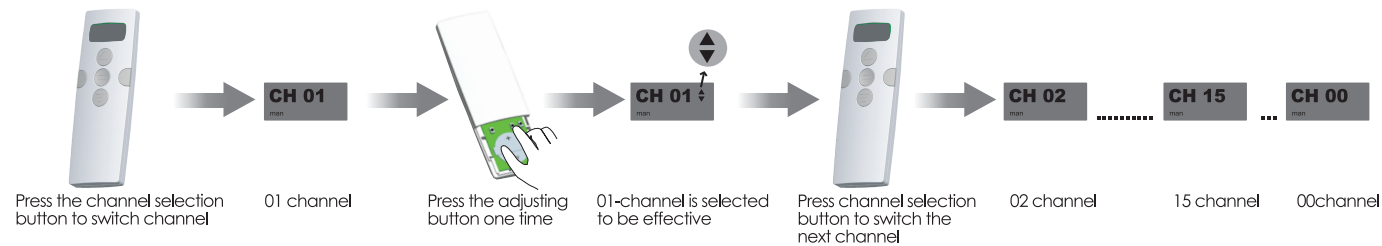


Additional
Function

Mode Switch

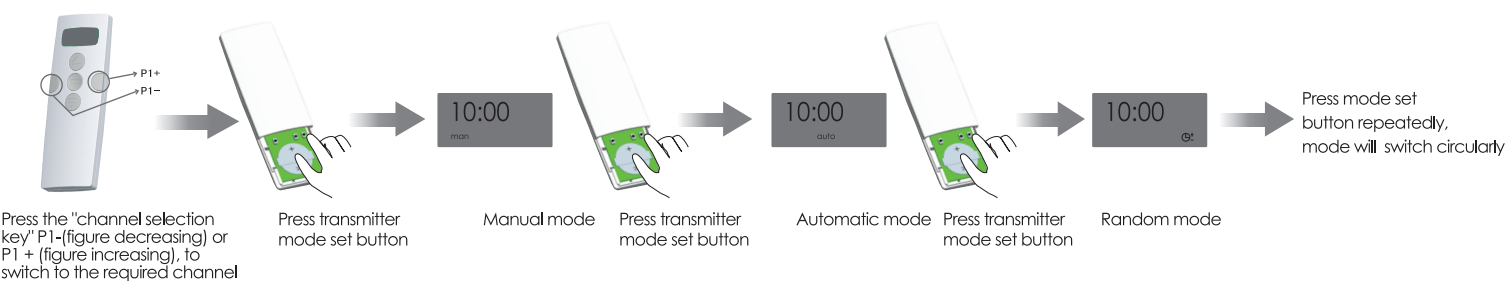


Additional
Function

The Current Time Setting

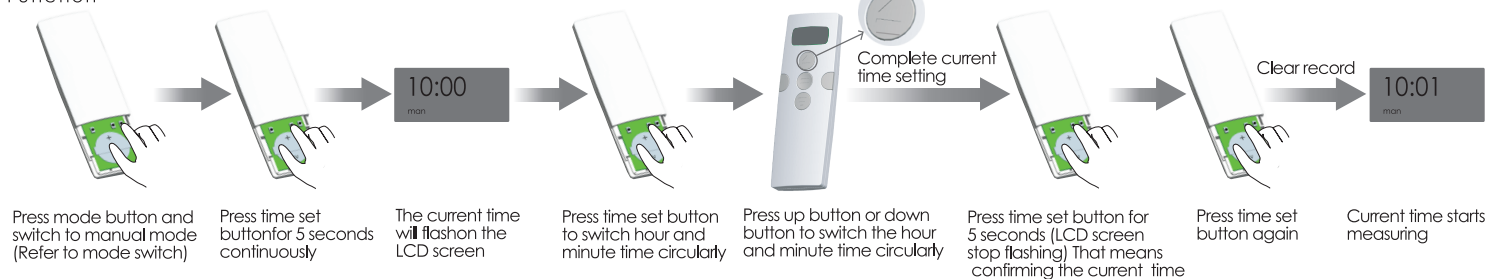

Additional
Function

Timing Setting

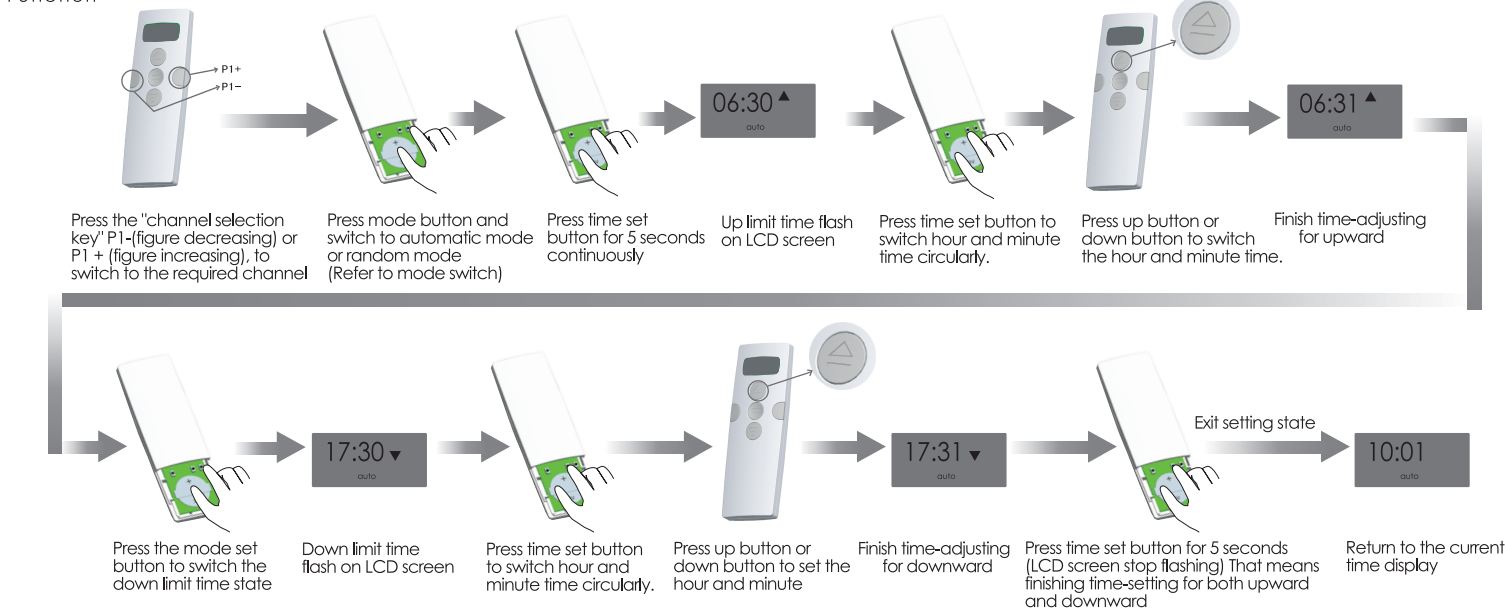

All controls support 433MHz & 868MHz

Control System

DC308 Time Transmitter Specification

Version No. : A/00



Technical Support

- Input voltage: 3V (CR2430)
- Transmitting frequency: 433.92MHz
- Transmitting power: 10 milliwatt
- Operating temperature: -10°C — +50°C
- Transmission distance: 200 meters open Office
35 meters on two walls

- Up button: control motor upward
- Down button: control motor downward
- Stop button: control motor stop
- Set up button: features settings for the motor (effective for Radio motor)
- Mode set button: For switch motor mode
- Time set button: for adjust the internal time of transmitter

DC308 is 15 Channel Timer emitter, One number of LCD screen means one control channel. Press 'channel choose' button P1-(figure descending) or P1+(figure increasing) to change the channel. And so on, loose finger when the indicator light move to suitable channel, this channel is the current channel.

1 If LCD screen number shows CH00 that means group control, Group channel specific operation is as follows:

The manual mode under Group-control (CH00) channel — whether group-control channel (CH00) is selected for effective state or not, press button to control all channels' motors rotation and group-channel timing is invalid (There is no timing function when under manual mode)

The automatic mode under Group-control (CH00) channel — when group-control channel (CH00) is not selected for effective state (refer to the effective channel selection), press button to control all channels' motors rotation, group-channel timing is invalid.

The automatic mode under Group-control (CH00) channel — when group-control channel (CH00) is selected for effective state (refer to the effective channel selection), press button to control all channels' motors rotation, group-channel timing is effective, that is, the time of selected channel (refer to the effective channel selection) is available.

The random mode under Group-control (CH00) channel — when group-control channel (CH00) is not selected for effective state (refer to the effective channel selection), press button to control all channels' motors rotation, group-channel timing is invalid.

The random mode under Group-control (CH00) channel — when group-control channel (CH00) is selected for effective state (refer to the effective channel selection), press button to control all channels' motors rotation, group-channel timing is effective, that is, the time +15 minutes of selected channel (refer to the effective channel selection) is available by random.

2 It's the common channel when switch to the LCD screen display figure for CH01, CH02 ... CH15. Common channel specific operation is as follows:

Manual mode under Common channel — Whether the channel is not selected for effective state or not, press button to control this channel motor rotation, and the timing emitter is invalid

Automatic mode under common channel — when the channel is not selected for effective state (refer to the effective channel selection), press button to control this channel motor rotation, the timing emitter is invalid

Automatic mode under common channel — when the channel is selected for effective state (refer to the effective channel selection), press buttons to control this channel motor rotation, the timing emitter is available.

Random mode under common channel — when the channel is not selected for effective state (refer to the effective channel selection), press button to control this channel motor rotation, the timing emitter is invalid

Random mode under common channel — when the channel is selected for effective state (refer to the effective channel selection), press button to control this channel motor rotation, the timing +15 minutes emitting is effective.

Note 1: The time difference between setting up limit time and down limit cannot be less than 32 minutes. Otherwise the Error will show on the LCD screen of transmitter under Automatic mode and Random mode. Simultaneously, Time set is invalid, and set status is exited.

Note 2: There is no timing setting when under group control channels status



Technical Support

