







The time period for POWER ON should be 5 seconds minimum



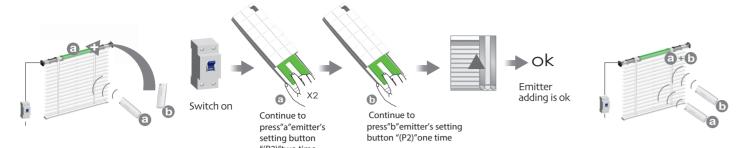

Cancel the limit



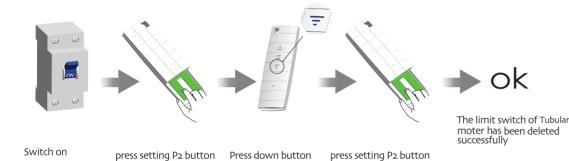

Cancel Emitter



To clean up the emitter means deleting all the memory of emitter and limit switch in the motor receivers







press setting P2 button one time

Press stop button one time

press setting P2 button one time



rechargeable Description

the motor have a built-in battery, used DC782 transformer, when battery power supply shortage, insert charger, charger linght show red light. batteries is full When the red light turned to green



E:Electronic

Electronic Limit + Built-in Receiver + rechargeable Built-in battery



Version No.: A/00














.....

One Electronic motor maximum can store 20 channels, over 20 channels, if still need add new channels, it will be repeating covered in turn from second channel.

Please set the limit position before use, as the setting method please see: 6 'set up/down limit position' as reference.

Group control programme is noneffective; deleting programme, adding programme and setting limit switch is effective

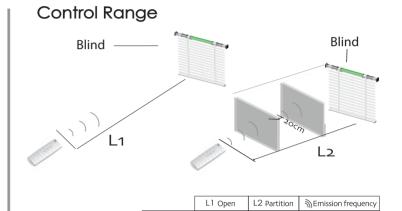

200m

8.4V

DM25LE

433.92MHz















miniaturised emitte




miniaturised emitter



DC279





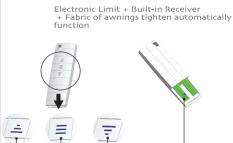

Button specification

Single-channel time emitter DC112

DC137 DC170

Portable Single-channel wall-mounted emitter

Portable double-channel wall-mounted emitter

Wireless wind-sun sensor DC83

UP STOP DOWN SETTING BUTTON














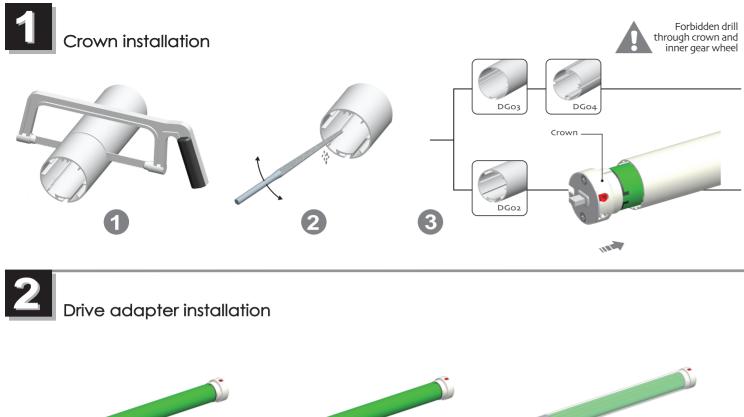








Rechargeable signal






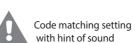





The interval of each button must within 4 seconds of resetting, otherwise the system will restore the original state.

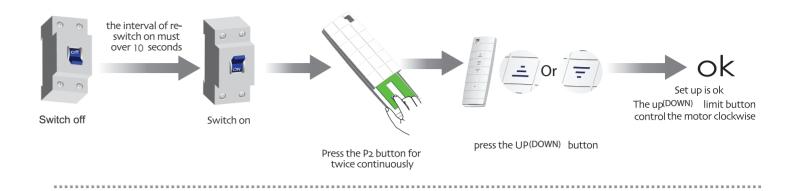






Code matching setting with hint of sound

Delet all the datas of the motor and the new emitter has been programmed.



The interval of each button must within 4 seconds of resetting, otherwise the system will restore the original state.

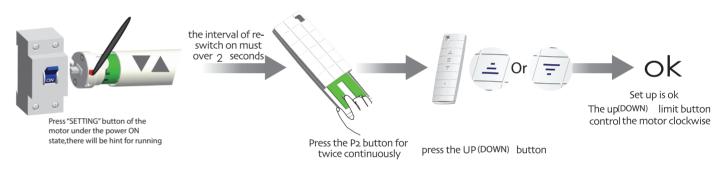





It is invalid when the first limit and second limit are at the same location. New location should be confirmed, and the system won't exit from limit setting function once the second limit wasn't be set. The motor can work for max 7 seconds. The present limit has to be recorded once Power OFF.





Press the P2 button

press the UP button

Press the P2 button Inter setting condition, the motor turn up and downfor cluing on.



Press any key of the emitter to adjust upper limit



Press the stop button continuously for over 5 times untill the motor roll up and down for hint, that means the upper limit setting successful.

Press any key of the emitter to adjust lower limit

Press the stop button continuously for over 5 times until the motor roll up and down for hint, that means the lower limit setting successful.