



 ϵ

In order to fully explore available functions of NANO series please take a moment and read this manual before using the device. NANO control units are compatible with all YOODA brand devices.

1. General information




Single-channel NANO control unit, white (NANO_1Cf)

- 1. Control: can control single motor
- 2. Memory: up to 20 transmitters
- 3. Range:200 meters outdoor,35 meters indoor
- 4. Power supply: 230 V / 50 Hz
- 5. Output voltage: 230 V / 50 Hz
- 6. Output power: 300 W
- 7. Dimensions: 51 x 51 x 27 mm
- 8. Operating temperature: frim 0°C to 50°C
- 9. Protection degree: IP 20



Radio receiver range is a variable value and can differ from declared values depending on conditions in which device operates. Possible sources of changes in range are building construction, interference caused by other radio transmitters etc.

2. Detailed description

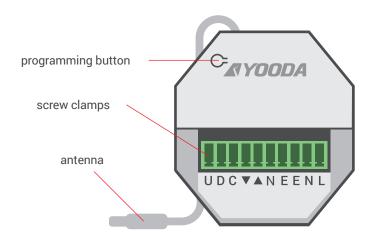


Single-channel NANO control unit (front)

3. Installation



Optimal mounting parameters:

- 1. Minimal length from the ground > 1,5 m,
- 2. Minimal length from the wall and ceiling > 0,3 m,
- 3. Minimal length between receivers > 0,2 m.

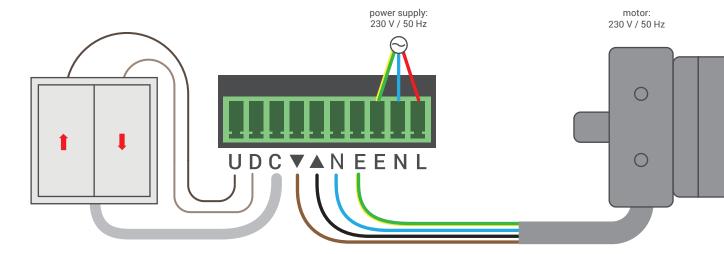




Installation of the tubular motor should be performed by specialists with 1kV or higher SEP-certified electrician's licence (SEP - Association of Polish Electrical Engineers) or equal license. Device is designed to operate in places shielded from unfavourable weather conditions. Motor should be installed in accordance with all provisions of regional law and professional standards. All cables connecting power receiver with electric source should be protected from overload and short-circuits effects with devices automatically disconnecting power. Device should be powered with a separate source and protected only with a fast-blow fuse (never slow-blow fuse). Creating electrical system using inadequate fuse may result in loosing rights under the provisions of warranty. When connecting device to power source with cables with adequate cross-section should be used. Long-lasting output load capacity table should be the ground for choosing adequate cables.


4. Programming first transmitter



- 1. Longer than 4 seconds pause between series of button clicks during programming will cause device to switch off from programming mode without saving any changes.
- 2. Programming transmitter using this method will result in deleting receiver memory.

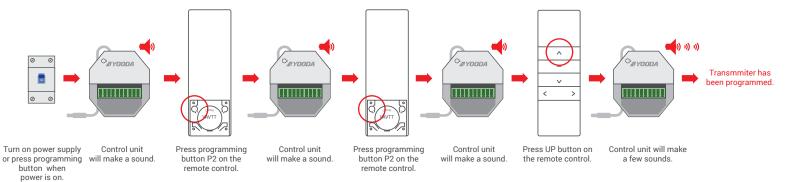


5. Changing work motor direction

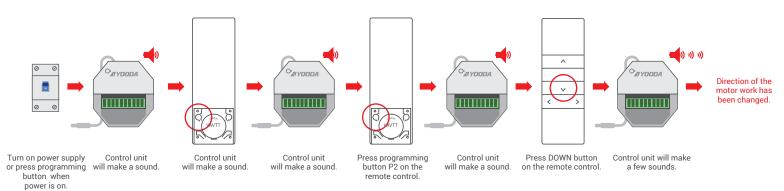


6. Programming another transmitter



- 1. The receiver can be controlled by a maximum of 20 transmitters.
- 2. Longer than 4 seconds pause between series of button clicks during programming will cause device to switch off from programming mode without saving any changes.

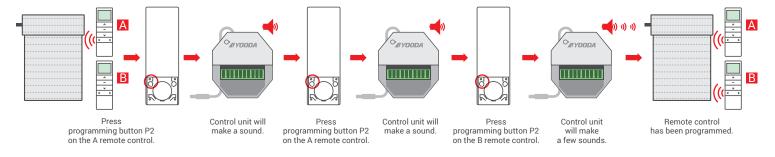


7. Deleting all transmitters

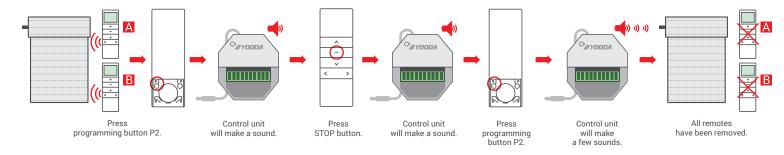

8. Activating impulse mode



- 1. When impulse mode is activated, single push of UP or DOWN button forces motor to make single part of a full turn, and when UP or DOWN button is being held for 2 seconds it will force motor to run constantly.
- 2. To reverse this procedure please repeat the instruction.

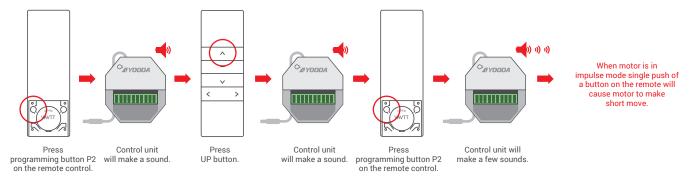

9. Programming key-ring remotes



- 1. When programming key-ring remotes that do not have additional P2 programming button the same function is substituted with simultaneous push of STOP and UP buttons.
- 2. Longer than 4 seconds pause between series of button clicks during programming will cause device to switch off from programming mode without saving any changes.
- 3. Programming transmitter using this method will result in deleting receiver memory.

